

Cylinder with Lock ø32, ø40, ø50, ø63, ø80, ø100



Lock can be manually operated with a hexagon wrench.

Can be easily mounted onto equipment



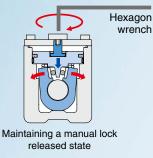

- Bore sizes Ø80 and Ø100 have been added.
- Lock units 80 and 100 have been added. (Applicable rod size: Ø25, Ø30)








Cylinder with Lock MWB Series

A locking cylinder ideal for intermediate stops, emergency stops, and drop prevention

- Built-in manual lock release holding mechanism
- It is possible to release the locked state with a hexagon wrench and hold the released state without pressurizing the unlock port.
- Simple construction
- The condition of the lock release bolt allows for visual confirmation of whether the cylinder is in a locked or manual lock released state.

Locked

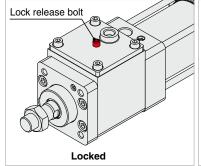



Refer to page 41 for the manual lock release.

wrench	Overall ler
	18 mm m Up to 18 mm shorter
	Ov
2	

Manual	lock	released
--------	------	----------

Overall length reduced by 18 mm max. Up to 18 mm shorter compared with the MNB series Overall length

建金		

Overall length reduced [mm] Bore size [mm] MWB MNB Reduction 205 32 194 11 40 212 216 4 234 50 245 11 63 246 259 13 80 303 321 18 100 341 18 323

* For basic type dimensions

Cylinders dimensionally compatible with the MNB series are available. (Made to order individual specifications: -X3000)

Refer to page 35 for details.

Unlock port

When pressurized: Unlocked When exhausted: Locked

Improved holding force Improved by up to 15% compared

with the MNB series

Bore size [mm] MWB MNB Increase rate [%] 32 630 552 14 40 980 882 11 50 1570 1370 15 63 2450 2160 13 80 3920 3430 14 100 6080 5390 13	Improved hole	ding force		[N]
40 980 882 11 50 1570 1370 15 63 2450 2160 13 80 3920 3430 14	Bore size [mm]	MWB	MNB	Increase rate [%]
50 1570 1370 15 63 2450 2160 13 80 3920 3430 14	32	630	552	14
63 2450 2160 13 80 3920 3430 14	40	980	882	11
80 3920 3430 14	50	1570	1370	15
	63	2450	2160	13
100 6080 5390 13	80	3920	3430	14
	100	6080	5390	13

Compact auto switches are mountable.

- Solid state auto switch: D-M9□
- Reed auto switch: D-A9□
- Magnetic field-resistant auto switch: D-P3DWA D-P4DW

The lock unit and the cylinder are separable in order to improve maintainability.




Lock Unit (page 32)

Can be used in combination with an actuator



Part numbers for products with a rod end bracket and/or a pivot bracket are available.

It is not necessary to order a bracket for the applicable cylinder separately. * Rod end brackets and pivot brackets are shipped together with the product, but not assembled.

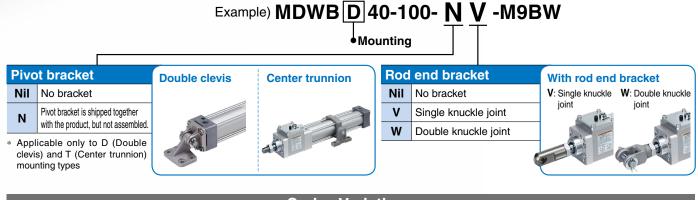

Series Variations

Cylinder with Lock					
Single rod	Bore size [mm]	Lock holding force [N]	Cushion	Rod boot	Made to order
Double rod	32 40 50 63 80 100	630 to 6080	Air cushion Rubber bumper	 Nylon tarpaulin Heat-resistant tarpaulin 	 Change of rod end shape (Single rod only) With coil scraper Made of stainless steel Dimensionally compatible with the MNB series (Air cushion only)




Lock Unit

A safety mechanism can be designed if required. It can also be combined with a wide variety of actuators.

• Prevents the workpiece from falling

 Retains the workpiece position even when the air supply is shut off due to power failure, etc.

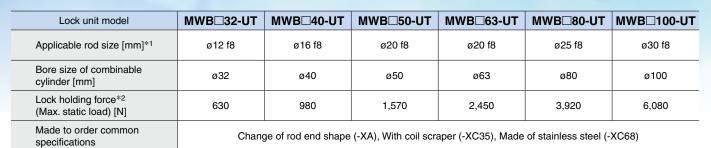

1

*1 The applicable rod size affects the holding force, so use a rod with the rod size tolerance shown in the table above.
 *2 The holding force (max. static load) shows the maximum capability and does not show the normal holding capability. Be sure to select a cylinder using


the method described in Model Selection (page 5).


* When inserting the rod into the lock unit, be sure to avoid damaging the seal and inner periphery of the product. For details, refer to page 44.

Part numbers for lock units with an applicable rod are now available.

It is not necessary to order a rod for the lock unit separately.

* Rod is shipped together with the product.

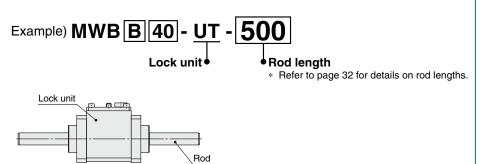

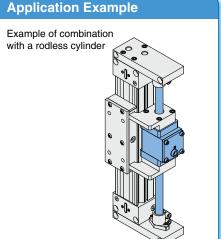

CONTENTS

Cylinder with Lock MWB Series

	Model Selection	p. 5	e Rod
	MWB Series/Single Rod		Double Acting, Single Rod MWB
	How to Order	n 7	e Acti
	Specifications		Doubl
	Working Principle		
	Construction	•	le Rod
	Dimensions	•	3V Boub
		p. 12	Acting, Doub
	MWBW Series/Double Rod		Double Acting, Double MWBW
I DE TE	How to Order	····· p. 17	
	Specifications	····· p. 18	
	Construction	····· p. 20	ΞĻ
	Dimensions	····· p. 21	Lock Unit MWB-UT
			ΞĘ
	Auto Switch Mounting	····· p. 24	
A _	MWB-UT Series/Lock Unit		tch
	How to Order/Specifications	n 00	Auto Switch
	Construction	•	Auto
	Dimensions	•	1
		p. 34	
	Made to Order Individual Specifications		Made to Order
e e	Dimensionally Compatible with the MNB Series (-X3000)	····· p. 35	o to
	With Lock Status Indication (-X3030)	· р. 35-1	lade
			~
	Simple Specials	p. 36	
	Change of Rod End Shape (-XA0 to XA30)		
	Made to Order Common Specifications	····· p. 38	
	With Coil Scraper (-XC35)		
	Made of Stainless Steel		
	(For Lock Unit, With Hard Chrome Plating) (-XC68)		
	(
	Specific Product Precautions	····· p. 39	

Model Selection

MWB Series Model Selection


Precautions on Model Selection

A Caution

 In order that the originally selected maximum speed shall not be exceeded, be certain to use a speed controller to adjust the total movement distance of the load so that movement takes place in no less than the applicable movement time.

The movement time is the time that is necessary for the load to travel the total movement distance from the start without any intermediate stops.

2. In cases where the cylinder stroke and the movement distance of the load are different (double speed mechanism etc.), use the movement distance of the load for selection purposes.

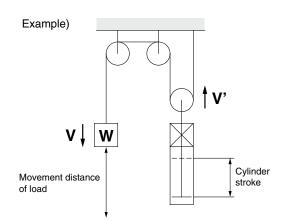

3. The following selection example and procedures are based on use at the intermediate stop (including emergency stops during operation). However, when the cylinder is in a locked state, kinetic energy does not act upon it. Under these conditions, use the load mass at the maximum speed (V) of 100 mm/s shown in graphs 5 to 7 on page 6 depending on the operating pressure and select models.

Selection Example

- Load mass : **m** = 50 kg
- Movement distance : st = 500 mm
- Movement time : t = 2 s
- Load condition : Vertical downward = Load in direction of rod extension
- Operating pressure : **P** = 0.4 MPa
- Step 1: From graph 1, find the maximum movement speed of the load


: Maximum speed : $\textbf{V}\approx$ 350 mm/s.

Step 2: Select graph ⓑ based upon the load conditions and operating pressure, and then from the intersection of the maximum speed V = 350 mm/s found in Step 1, and the load mass m = 50 kg.

 \therefore ø63 \rightarrow Select an MWB63 or larger bore size.

Step **1** Find the maximum load speed V.

Find the maximum load speed: V [mm/s] from the load movement time: t [s] and the movement distance: st [mm].

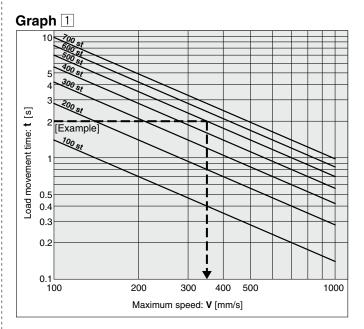


Step 2 Find the bore size.


Select a graph based upon the load condition and operating pressure, and then find the point of intersection for the maximum speed found in Step **1** and the load mass. Select the bore size on the above the point of intersection.

Load Condition Operating Pressure


Load in the direction at the right angle to rod (* Being held by a guide)

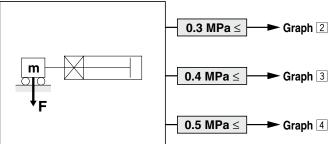

Load in the direction of rod extension Load in the direction of rod retraction

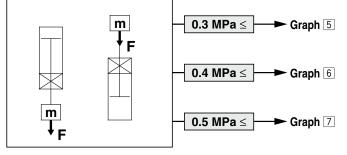

Model Selection **MWB** Series

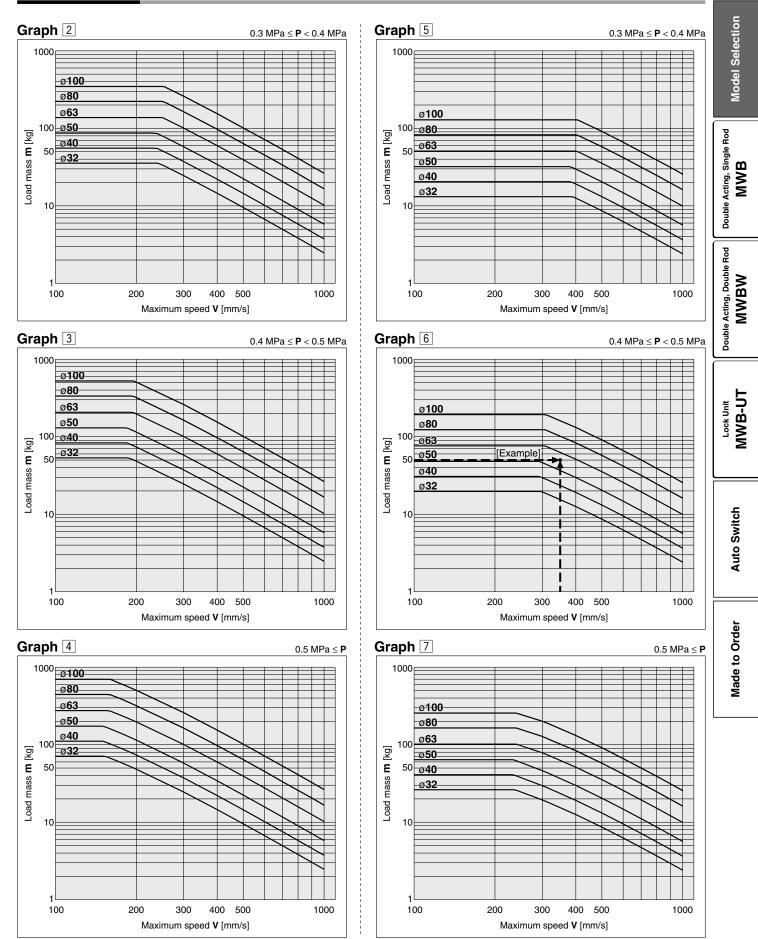


SMC

Selection Graph

Cylinder with Lock Double Acting, Single Rod MWB Series ø32, ø40, ø50, ø63, ø80, ø100

RoHS

How to Order

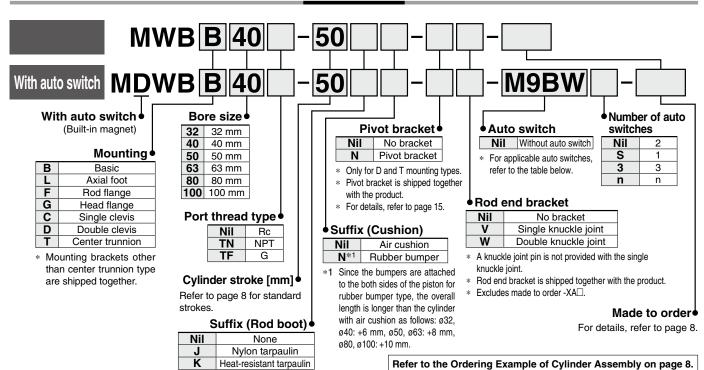

Applicable Auto Switches/Refer to the Web Catalog for further information on auto switches

		Electrical	light	Wiring	L	oad volta	ge	Auto swit	ch model	Lead w	ire le	ngth	[m]	Pre-wired Appli		aabla								
Гуре	ype Special function entry		Indicator light	(Output)	C	C	AC	Tie-rod mounting	Band mounting	0.5 (Nil)	1 (M)	3 (L)	5 (Z)	connector	loa									
				3-wire (NPN)		5 V, 12 V		M9N	—	•		\bullet	0	0	IC									
		Grommet		3-wire (PNP)	24 V	5 V, 12 V		M9P	—			\bullet	0	0	circuit									
				2-wire	12 V	12 V		M9B	—			\bullet	0	0										
ch		Terminal		3-wire (NPN)		5 V, 12 V		_	G39	—	—	—	—	—	—									
switch		conduit		2-wire		12 V		—	K39	—	—	—	—	—										
o s	Diagnastia indiastian			3-wire (NPN)		5 V, 12 V		M9NW	—			\bullet	0	0	IC									
auto	Diagnostic indication (2-color indicator)		Yes	3-wire (PNP)		5 V, 12 V		M9PW	—			\bullet	0	0	circuit	Relay,								
Ite			162	2-wire		12 V		M9BW	_		\bullet	\bullet	0	0	—	PLC								
Solid state	Water registent			3-wire (NPN)	24 V 5 V, 12 V 12 V 5 V, 12 V	24 V	24 V	24 V	24 V	24 V	24 V	24 V 5 V 12 V		5 V 12 V	-	M9NA *1	—	0	0	\bullet	0	0	IC	
lid	Water-resistant (2-color indicator)	Grommet		3-wire (PNP)		5 V, 12 V		M9PA *1	_	0	0	\bullet	0	0	circuit									
S				2-wire					12 V		M9BA*1	—	0	0	\bullet	0	0	—						
	With diagnostic output (2-color indicator)			4-wire (NPN)			5 V, 12 V		F59F	_	•	—	\bullet	0	0	IC circuit								
	Magnetic field-resistant			2-wire		_		P3DWA	—	•	—	\bullet		0										
	(2-color indicator)			(Non-polar)				P4DW	_	—	—	\bullet	\bullet	0										
			Yes	3-wire (NPN equivalent)	_	5 V	—	A96	_	•	\bullet	\bullet		0	IC circuit									
۲			162				100 V	A93		•	•	\bullet	۲	0*2	—									
switch		Grommet	No				100 V or less	A90	—	•	\bullet	\bullet		O*2	IC circuit	Relay,								
			Yes				100 V, 200 V	A54			—		۲	_		PLC								
uto			No	2-wire	24 V	12 V	200 V or less	A64		•	—	\bullet	_											
Reed auto	q	Terminal		2-0016	24 V		—	_	A33	—	—	—	—	_	_	PLC								
Ree		conduit	Yes				100 V, 200 V	_	A34		—	—	_			Relay,								
		DIN terminal	162				100 0, 200 0	_	A44		—	—	—			PLC								
	Diagnostic indication (2-color indicator)	Grommet				_	_	A59W	l —	•	—	\bullet	—	_										

*1 Water-resistant type auto switches can be mounted on the above models, but SMC cannot guarantee water resistance.

A water-resistant type cylinder is recommended for use in an environment which requires water resistance.

*2 The load voltage used is 24 VDC.

* Lead wire length symbols: 0.5 m.....Nil (Example) M9NW 3 m----- L (Example) M9NWL 5 m..... Z (Example) M9NWZ

1 m······M (Example) M9NWM

Auto switches marked with " \bigcirc " are produced upon receipt of order.

Since there are applicable auto switches other than those listed above, refer to page 30 for details.

* The D-A9□/M9□/P3DWA□ auto switches are shipped together, but not assembled. (Only the auto switch mounting brackets are assembled for the D-A9□/M9□ before shipment.)




Cylinder with Lock Double Acting, Single Rod **MWB** Series



Symbol

Rubber bumper Air cushion



Made to Order Individual Specifications (For details, refer to pages 35 to 35-4.)

Symbol	Specifications
-X3000	Dimensionally compatible with the MNB series
-X3030🗆	With lock status indication
-X3075	ISO 13849-1 safety standard compliant product / Cylinder with brake/lock unit

Made to Order Common Specifications Click here for details.

Symbol	Specifications
-XA🗆	Change of rod end shape
-XC14	Change of trunnion bracket mounting position
-XC35	With coil scraper


For details of **cylinders with auto switches** ⇒ pages 24 to 30

Auto Switch Proper Mounting Position (Detection at stroke end) and Mounting Height

- Minimum Stroke for Auto Switch Mounting
- · Auto Switch Mounting Brackets/Part Nos.
- · Operating Range

Ordering Example of Cylinder Assembly

Cylinder model: MDWBD32-50-NW-M9BW

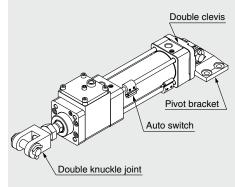

Mounting D: Double clevis Pivot bracket N: Yes Rod end bracket W: Double knuckle joint Auto switch D-M9BW: 2 pcs.

 Pivot bracket, double knuckle joint, and auto switch are shipped together with the product, but not assembled.

Cylinder Specifications

Bore size [mm]	32	40	50	63	80	100	tio	
Action		[Double actin	g, Single ro	d		lec	
Fluid			А	ir			Model Selection	
Proof pressure		1.5 MPa						
Max. operating pressure			1.0	MPa			P B B	
Min. operating pressure		0.08 MPa						
Ambient and fluid	v		switch: -10			.)	σ	
temperatures	With auto switch: -10°C to 60°C (No freezing)							
Lubricant			Not required	d (Non-lube)		ingle W	
Piston speed			50 to 100	0 mm/s*1			Acting, Sir MWB	
Stroke length tolerance	Up to 250 st	: ^{+1.0} , 251 to 1	000 st: ^{+1.4} ₀ , 1	001 to 1500 s	st: +1.8, 1501 to	2000 st: +2.2	Double Acting, Single Rod MWB	
Cushion		Air	cushion or I	Rubber bun	nper		ble /	
Port size (Rc, NPT, G)	1/8	1,	/4	3	3/8	1/2	Dou	
Mounting	Basic, Axial foot, Rod flange, Head flange Single clevis, Double clevis, Center trunnion							

*1 Load limits exist depending upon the piston speed when locked, mounting direction, and operating pressure.

Lock Unit Specifications

Bore size [mm]	32	40	50	63	80	100		
Locking action	Exhaust locking							
Max. operating pressure	1.0 MPa							
Min. operating pressure	0.3 MPa							
Locking direction	Both directions							
Holding force (Max. static load) [N]*1	630	980	1570	2450	3920	6080		

*1 The holding force (max. static load) shows the maximum capability and does not show the normal holding capability. Be sure to select a cylinder using the method described in Model Selection (page 5).

Standard Strokes

* When using with auto switches, refer to the Minimum Stroke for Auto Switch Mounting table on pages 26 to 28.

			[mm]				
Bore	Standard stroke						
size	Stroke range ①	Stroke range 2	manufacturable stroke				
32	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500	Up to 1000					
40	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500						
50	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600		Lin to 2500				
63	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600	Up to 1800	Up to 2500				
80	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600, 700, 800						
100	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600, 700, 800						

* The manufacturing of intermediate strokes is possible. (Spacers are not used.)

- * Applicable strokes should be confirmed according to the usage. For details, refer to the Air Cylinders Model Selection in the **Web Catalog**. In addition, products that exceed the stroke range ① might not be able to fulfill the specifications due to deflection, etc.
- * Please consult with SMC for details on manufacturability and for part numbers when exceeding the stroke range 2.
- When using a rod boot, a stroke range of up to 1000 mm is available. Please consult with SMC when exceeding a 1000 mm stroke.

Stopping Accuracy

Bore size [mm]	32 40 50 63 80 [·]								
Lock type	Exhaust locking								
Stopping accuracy [mm]		±1.0							
Conditions	 Supply p Piston s Load co Solenoid v 	oressure: 0. peed: 300 r ndition: Upp valve for loc		llowed value	unlock port.				



ock Unit Doub	MWB-IIT
	itch MV

Auto Sw

Made to Order

e Acting, Double MWBW

MWB Series

Accessories

	Mounting		Axial foot	Rod flange	Head flange	Single clevis	Double clevis	Center trunnion
Standard	Rod end nut	•	•	•	•	•	•	•
Standard	Clevis pin	—	_	_	—	—	•	_
	Single knuckle joint	•	•	•	•	•	•	•
Option	Double knuckle joint (with pin)	•	•	•	•	•	•	•
	Rod boot	•	•	•	•	•	•	

* Refer to page 16 for dimensions and part numbers of the accessories. (Except rod boot)

Mounting Brackets/Part Nos.

Bore size [mm]	32	40	50	63	80	100
Axial foot*1	MB-L03	MB-L04	MB-L05	MNB-L06*	MB-L08	MB-L10
Rod/Head flange	MNB-F03*	MNB-F04*	MNB-F05*	MNB-F06*	MB-F08	MB-F10
Single clevis	MB-C03	MB-C04	MB-C05	MB-C06	MB-C08	MB-C10
Double clevis	MB-D03	MB-D04	MB-D05	MB-D06	MB-D08	MB-D10

*1 Order two foot brackets per cylinder.

* Accessories for each mounting bracket are as follows.

Axial foot, Rod/Head flange, Single clevis: Body mounting bolt

Double clevis: Clevis pin, Split pins, Flat washers and Body mounting bolt

* All are common to the MB series air cylinders, except the sections marked with a "*".

Theoretical Output

							► 0U	Т	•	IN		Unit: N)
Bore size	Rod size	Operating	Piston area	Operating pressure [MPa]								
[mm]	[mm]	direction	[mm ²]	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
20	12	OUT	804	161	241	322	402	482	563	643	724	804
32	12	IN	691	138	207	276	346	415	484	553	622	691
40	16	OUT	1257	251	377	503	629	754	880	1006	1131	1257
40	10	IN	1056	211	317	422	528	634	739	845	950	1056
50	20	OUT	1963	393	589	785	982	1178	1374	1570	1767	1963
50	20	IN	1649	330	495	660	825	989	1154	1319	1484	1649
63	20	OUT	3117	623	935	1247	1559	1870	2182	2494	2805	3117
03	20	IN	2803	561	841	1121	1402	1682	1962	2242	2523	2803
00	25	OUT	5027	1005	1508	2011	2514	3016	3519	4022	4524	5027
80	25	IN	4536	907	1361	1814	2268	2722	3175	3629	4082	4536
100	30	OUT	7854	1571	2356	3142	3927	4712	5498	6283	7069	7854
100	30	IN	7147	1429	2144	2859	3574	4288	5003	5718	6432	7147

* Theoretical output [N] = Pressure [MPa] x Piston area [mm²]

Weight

								[kg]
Bore size [mm]				40	50	63	80	100
		Lock unit	0.42	0.83	1.15	1.79	2.81	5.44
Basic weight (at 0 stroke)	Basic	Cylinder (at 0 stroke)	0.43	0.70	1.16	1.51	2.80	4.36
		Total	0.85	1.53	2.31	3.30	5.61	9.80
	Foot bracket (2 pcs.)		0.12	0.14	0.22	0.26	0.50	0.66
Mounting bracket	Rod/He	ad flange	0.24	0.32	0.53	0.74	1.45	1.83
weight (including bracket	Single	clevis bracket	0.25	0.23	0.34	0.63	1.11	1.58
mounting bolts)	Double	clevis bracket	0.26	0.27	0.43	0.79	1.40	1.85
	Trunnic	on bracket	0.29	0.36	0.48	0.80	1.55	1.69
Additional weight per 5	0 mm of	stroke	0.11	0.16	0.26	0.27	0.42	0.56
	Single	knuckle joint	0.15	0.23	0.26	0.26	0.60	0.83
Accessories	Double (with pi	knuckle joint n)	0.22	0.37	0.43	0.43	0.87	1.27


SMC

Rod Boot Material

Symbol	Material	Max. ambient temp.
J	Nylon tarpaulin	70°C
К	Heat-resistant tarpaulin	110°C*1

*1 Max. ambient temperature for rod boot itself

Allowable Kinetic Energy of the Cylinder*1

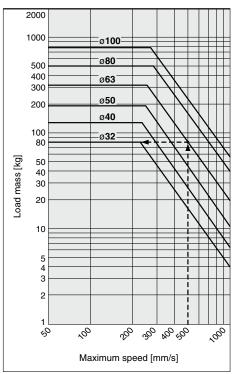

Example) Load limit at rod end when the air cylinder ø63 is actuated at 500 mm/s.

Extend upward from 500 mm/s on the horizontal axis of the graph to the intersection point with the line for a tube bore size of 63 mm, and then extend leftward from this point to find the load of 80 kg.


*1 The allowable kinetic energy of the cylinder is shown without the intermediate stop or emergency stop. Refer to page 5 or 6 for the kinetic energy with intermediate or emergency stop.

Calculation example)

- MWBL32-100 (Axial foot, ø32, 100 mm stroke) • Basic weight…0.42 (Lock unit, ø32)
- Basic weight…0.43 (Cylinder, ø32)
- Additional weight...0.11/50 mm stroke
- Cylinder stroke…100 mm stroke
- Foot bracket…0.12
- 0.42 + 0.43 + (0.11/50) x 100 + 0.12 = **1.19 kg**

Working Principle


Normal operation (Operation pressurized by air)

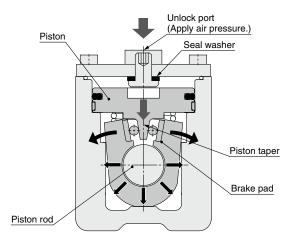

Unlocked (when air pressure is applied)

When air is supplied to the unlock port, the piston moves downward, the brake pad is opened by the tapered portion at the bottom of the piston and the piston rod will be free to move. This is the lock released state.


 $\ast~$ Check that there is no air leakage from the unlock port.

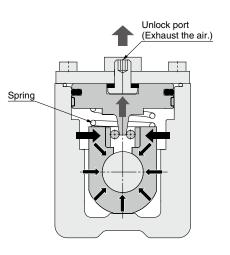

Locked (when air is exhausted)

When the air supplied to the unlock port is exhausted, the piston moves upward due to the spring force at the bottom of the piston and rigidity of the brake pad. Then, the brake pad is closed and holds the piston rod, locking its movement. This is the locked state.

Manual lock release

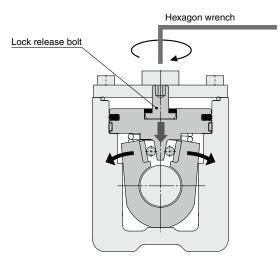

Manual lock released

When the lock release bolt is screwed-in, the piston moves downward, the brake pad is opened by the tapered portion of the piston and the piston rod will be freed. This holds the lock in the released state. Refer to page 41 for how to return to the locked state. Auto Switch

Model Selection

Rod

Acting, Sing MWB

Dou


Double Acting, Double Rod

MWBW

Lock Unit MWB-UT

MWB Series

Construction

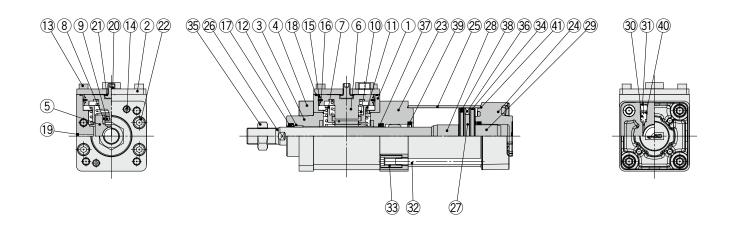

Component Parts

No.	Description	Material	Qty.	Note
1	Brake unit	Aluminum alloy	Qiy.	Hard anodized
2		Rolled steel	1	Zinc chromated
2	Cap Collar		1	Chromated
		Aluminum alloy	•	
	Retaining plate	Aluminum alloy	1	Anodized
5	Brake pad	Cast iron	1	
6	Piston A	Aluminum alloy	1	
7	Roller holder	Carbon steel	1	
8	Roller receiver	Stainless steel	2	Heat treated
9	Needle roller	Carbon steel	2	Heat treated
10	Piston spring	Spring steel	1	Zinc chromated
11	Roller spring	Spring steel	1	Zinc chromated
12	Bushing	Bearing alloy	1	
13	Hexagon socket head cap screw	Alloy steel	4	
14	Hexagon socket head cap screw	Alloy steel	2	
15	Wear ring A	Resin	2	
16	Piston seal A	NBR	1	
17	Rod seal A	NBR	1	
18	Gasket	NBR	1	
19	Element	Bronze	1	
20	Release bolt	Alloy steel	1	
21	Seal washer	NBR + Stainless steel	1	
22	Hexagon socket head cap screw	Alloy steel	4	
23	Rod cover	Aluminum alloy	1	Anodized
24	Head cover	Aluminum die-cast	1	Chromated
25	Cylinder tube	Aluminum alloy	1	Hard anodized
26	Piston rod	Carbon steel	1	Hard chrome plating
27	Piston B	Aluminum alloy	1	
28	Cushion ring	Aluminum alloy	1	Anodized
29	Cushion ring B	Aluminum alloy	1	Anodized
	-	, ,		

Component Parts

No.	Description	Material	Qty.	Note
30	Cushion valve	Steel wire	2	Zinc chromated
31	Retaining ring	Spring steel	2	ø40 to ø100
32	Tie-rod	Carbon steel	4	Zinc chromated
33	Tie-rod nut	Carbon steel	8	Zinc chromated
34	Wear ring B	Resin	1	
35	Rod end nut	Carbon steel	1	Zinc chromated
36	Magnet	_	(1)	
37	Rod seal B	NBR	1	
38	Piston seal B	NBR	1	
39	Cushion seal	Urethane	2	
40	Cushion valve seal	NBR	2	
41	Cylinder tube gasket	NBR	2	

Replacement Parts/Seal Kit

Bore size [mm]	Kit no.	Contents
32	MWB32-PS	
40	MWB40-PS	A set of $\textcircled{1}$ Rod seal A,
50	MWB50-PS	 37 Rod seal B, 38 Piston seal B,
63	MWB63-PS	39 Cushion seal, and
80	MWB80-PS	(I) Cylinder tube gasket
100	MWB100-PS	


* Never dissemble the lock unit. It should be replaced as a unit. Refer to page 42 for the part numbers for placing an order. The seal kit shown above contains the rod seal for the cylinder and lock unit. Order the seal kit suitable for the cylinder bore size.

* The seal kit shown above includes a grease pack. (ø32, ø40, ø50: 10 g, ø63, ø80: 20 g, ø100: 30 g) Order with the following part number when only the grease pack is needed. **Grease pack part number: GR-S-010** (10 g), **GR-S-020** (20 g)




Cylinder with Lock Double Acting, Single Rod **MWB** Series



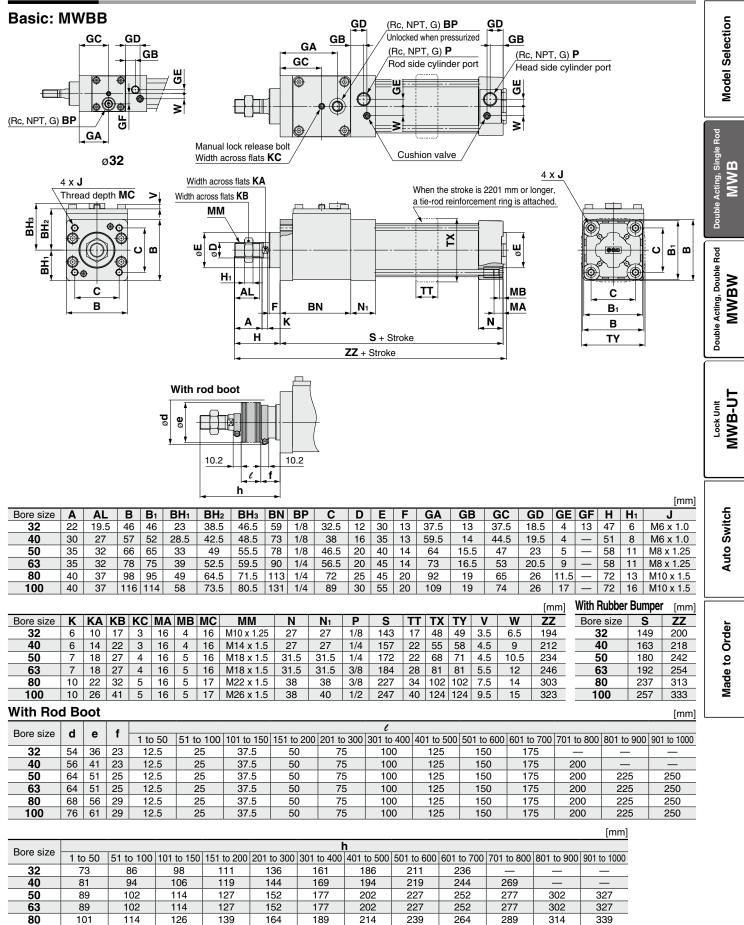

Dimensions: With Mounting Bracket

Axial foot: MWBL

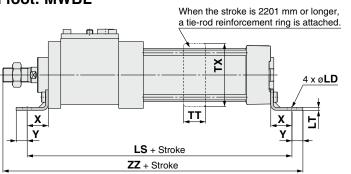


													[mm]
Bore size	LD	LH	LS	LT	LX	LY	LZ	TT	ΤХ	ΤY	X	Y	ZZ
32	7	30	187	3.2	32	68.5	50	17	48	49	22	9	221
40	9	33	205	3.2	38	75.5	55	22	55	58	24	11	243
50	9	40	226	3.2	46	89	70	22	68	71	27	11	268
63	12	48	238	3.6	56	100.5	80	28	81	81	27	14	283
80	12	55	287	4.5	72	119.5	100	34	102	102	30	14	343
100	14	65	311	4.5	89	138.5	120	40	124	124	32	16	367

Port Cushion valve

With Rubber Bumper						
LS	ZZ					
193	227					
211	249					
234	276					
246	291					
297	353					
321	377					
	LS 193 211 234 246 297					


Rod flange: MWBF

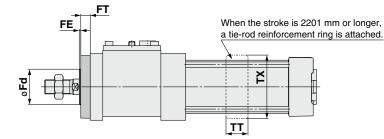


											[mm]
Bore size	FB	FD	Fd	FE	FT	FX	FY	FZ	TT	ТΧ	ΤY
32	56	7	30	3	10	72	38	87	17	48	49
40	65	9	35	3	10	83	46	101	22	55	58
50	77	9	40	2	12	100	52	120	22	68	71
63	92	9	45	2	12	115	62	135	28	81	81
80	100	12	45	4	16	126	63	153	34	102	102
100	120	14	55	4	16	150	75	178	40	124	124


Port Cushion valve 4 x ØFD 4 x ØFD 4 x ØFD FX FZ

Head flange: MWBG





										[mm]
Bore size	FB	FD	FT	FX	FY	FZ	TT	ΤХ	ΤY	ZZ
32	56	7	10	72	38	87	17	48	49	200
40	65	9	10	83	46	101	22	55	58	218
50	77	9	12	100	52	120	22	68	71	242
63	92	9	12	115	62	135	28	81	81	254
80	100	12	16	126	63	153	34	102	102	315
100	120	14	16	150	75	178	40	124	124	335

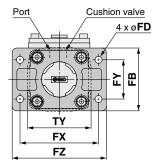

With Rubber Bu	mper [mm]
Bore size	ZZ
32	206
40	224
50	250
63	262
80	325
100	345



Cushion valve

СХ

ΖZ

229.5

248

283

295

374

394

тγ

Ζ

219

237

268

280

351

371

Port

Bore size

32

40


50

63

80


100

Dimensions: With Mounting Bracket

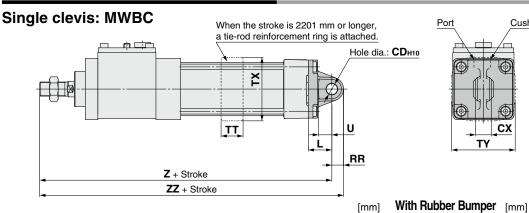

Bore size	CD H10	СХ	L	RR	U	TT	ΤХ	ΤY	Ζ	ZZ
32	10 ^{+0.058}	14 ^{-0.1} -0.3	23	10.5	13	17	48	49	213	223.5
40	10 ^{+0.058}	14 ^{-0.1} -0.3	23	11	13	22	55	58	231	242
50	14 ^{+0.070}	20 ^{-0.1} -0.3	30	15	17	22	68	71	260	275
63	14 ^{+0.070}	20 ^{-0.1} -0.3	30	15	17	28	81	81	272	287
80	22 ^{+0.084}	30 ^{-0.1} -0.3	42	23	26	34	102	102	341	364
100	22 +0.084	30 ^{-0.1} -0.3	42	23	26	40	124	124	361	384

Double clevis: MWBD

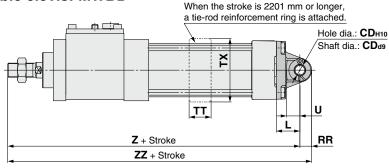


												[mm]
Bore size	CD H10	CDd9	СХ	CZ	L	RR	U	TT	ТХ	TY	Z	ZZ
32	10 ^{+0.058}	10 ^{-0.040} -0.076	14 ^{+0.3} +0.1	28	23	10.5	13	17	48	49	213	223.5
40	10 ^{+0.058}	10 ^{-0.040} -0.076	14 ^{+0.3} _{+0.1}	28	23	11	13	22	55	58	231	242
50	14 ^{+0.070}	14 ^{-0.050} -0.093	20+0.3+0.1	40	30	15	17	22	68	71	260	275
63	14 ^{+0.070}	14 ^{-0.050} -0.093	20+0.3+0.1	40	30	15	17	28	81	81	272	287
80	22 ^{+0.084}	22 ^{-0.065} -0.117	30 +0.3	60	42	23	26	34	102	102	341	364
100	22 ^{+0.084}	22 ^{-0.065} -0.117	$30^{+0.3}_{+0.1}$	60	42	23	26	40	124	124	361	384


Cushion valve Port СХ CZ TΥ

With Rubber Bumper [mm]											
Bore size	Z	ZZ									
32	219	229.5									
40	237	248									
50	268	283									
63	280	295									
80	351	374									
100	371	394									


Center trunnion: MWBT

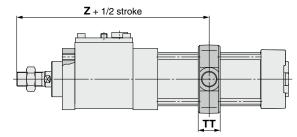

							[mm]
Bore size	TDe8	TT	ТХ	TY ₁	TY ₂	TZ	Ζ
32	12 ^{-0.032} -0.059	17	50	49	71	74	148
40	16 ^{-0.032} -0.059	22	63	58	77.5	95	166
50	16 ^{-0.032} -0.059	22	75	71	91	107	183
63	20 ^{-0.040} 0.073	28	90	87	103	130	195
80	20 ^{-0.040} -0.073	34	110	110	126.5	150	242
100	25 ^{-0.040} -0.073	40	132	136	148.5	182	262

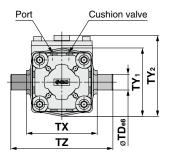

* Refer to Basic (B) for other dimensions.



With Rubber Bumper

Bore size

32

40

50

63

80

100

[mm]

Ζ

151

169

187

199

247

267


MWB Series


Pivot Bracket: Trunnion and Double Clevis Pivot Bracket

Part No.						
Bore size [mm]	32	40	50	63	80	100
Trunnion pivot bracket*1	MB-S03	MB-S04	MB-S04	MB-S06	MB-S06	MB-S10
Double clevis pivot bracket	MB-B03	MB-B03	MB-B05	MB-B05	MB-B08	MB-B08

*1 Order 2 trunnion pivot brackets per cylinder.


Trunnion pivot bracket

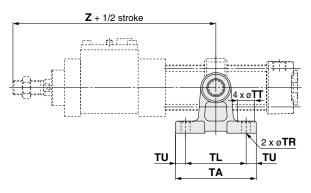

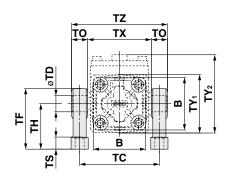

	[mr													[mm]	With Rubber Bumper [mm					
Part no.	Bore size	в	ТА	TL	τu	тс	тх	ΤZ	то	TR	тт	тѕ	тн	TF	TY ₁	TY ₂	z	TDH10	Bore size	z
MB-S03	32	46	62	45	8.5	62	50	74	12	7	13	10	35	47	49	71	148	12 ^{+0.070}	32	151
MB-S04	40	52	80	60	10	80	63	97	17	9	17	12	45	60	58	77.5	166	16 ^{+0.070}	40	169
WD-504	50	65	80	60	10	92	75	109	17	9	17	12	45	60	71	91	183	16 ^{+0.070}	50	187
MB-S06	63	75	100	70	15	110	90	130	20	11	22	14	60	80	87	103	195	20+0.084	63	199
INIB-200	80	95	100	70	15	130	110	150	20	11	22	14	60	80	110	126.5	242	20 ^{+0.084}	80	247
MB-S10	100	114	120	90	15	158	132	184	26	13.5	24	17	75	100	136	148.5	262	25 ^{+0.084}	100	267

Double clevis pivot bracket

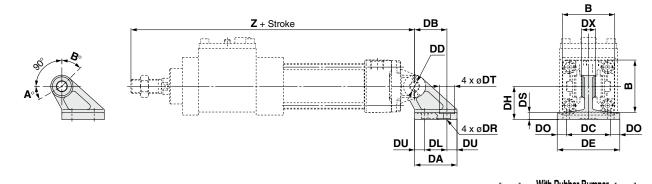

																[mm]	With Rubber Bump	er [mm]
Part no.	Bore size	в	DA	DB	DL	DU	DC	DX	DE	DO	DR	DT	DS	DH	z	DD H10	Bore size	z
MB-B03	32	46	42	32	22	10	44	14	62	9	6.6	15	7	33	213	10 ^{+0.058}	32	219
	40	52	42	32	22	10	44	14	62	9	6.6	15	7	33	231	10 ^{+0.058}	40	237
MB-B05	50	65	53	43	30	11.5	60	20	81	10.5	9	18	8	45	260	14 ^{+0.070}	50	268
INID-DUD	63	75	53	43	30	11.5	60	20	81	10.5	9	18	8	45	272	14 ^{+0.070}	63	280
MB-B08	80	95	73	64	45	14	86	30	111	12.5	11	22	10	65	341	22 ^{+0.084}	80	351
	100	114	73	64	45	14	86	30	111	12.5	11	22	10	65	361	22 ^{+0.084}	100	371
	100	114	13	04	45	14	00	30		12.5		22	10	05	301	22 0	100	5/1

Rotating Angle

Bore size [mm]	A°	B∘	A ° + B ° + 90°
32, 40	25°	45°	160°
50, 63	40°	60°	190°
80, 100	30°	55°	175°

Cylinder with Lock Double Acting, Single Rod **MWB** Series

Dimensions of Accessories

	Rod end nut (Standard)												
		·				[mm]							
Part no.	Bore size	d	н	В	с	D							
NT-03	32	M10 x 1.25	6	17	19.6	16.5							
NT-04	40	M14 x 1.5	8	22	25.4	21							
NT-05	50, 63	M18 x 1.5	11	27	31.2	26							
NT-08	80	M22 x 1.5	13	32	37	31							
NT-10	100	M26 x 1.5	16	41	47.3	39							
_													

l type

Single knuckle joint

										[mm]
Part no.	Bore size	Α	A 1	E1	L1	ММ	R1	U₁	NDH10	NX
I-03M	32	40	14	20	30	M10 x 1.25	12	16	10 ^{+0.058}	14 ^{-0.10} -0.30
I-04M	40	50	19	22	40	M14 x 1.5	12.5	19	10 +0.058	$14^{-0.10}_{-0.30}$
I-05M	50, 63	64	24	28	50	M18 x 1.5	16.5	24	14 ^{+0.070}	20 -0.10
I-08M	80	80	26	40	60	M22 x 1.5	23.5	34	22 +0.084	30 -0.10 -0.30
I-10M	100	80	26	40	60	M26 x 1.5	23.5	34	22 ^{+0.084}	30 -0.10

Knuckle joint pin Clevis pin m L [mm]								Model Selection		
Part no.	Bore s	size	Dd9	L	e	m	d (Drill through)		olicable olit pin	_
CD-M03*	/		10 ^{-0.040} -0.076	44	36	4	3	ø3	x 18L	lod
CD-M05*	,		14 ^{-0.050} -0.093	60	51	4.5	4		x 25L	jle F
CD-M08*	¹ 80, 1	00 2	22 -0.065	82	72	5	4	ø4	x 35L	B ing
Y type	 *1 Split pins and flat washers are included. Y type Double knuckle joint 								Double Acting, Single Rod MWB	
			MM	ØND)H10 					uble Rod V
									Double Acting, Double Rod MWBW	
Part no.	Bore size	E1 L1	MN	1 F	R1 U		н10 N	X	NZ	

20 30 M10 x 1.25 10 16 10^{+0.058}

22 40 M14 x 1.5 11 19 10^{+0.058}

 28
 50
 M18 x 1.5
 14
 24
 14*0070

 40
 65
 M22 x 1.5
 20
 34
 22*0084

 40
 65
 M26 x 1.5
 20
 34
 22*0084

 10
 65
 M26 x 1.5
 20
 34
 22*0084

 10
 65
 M26 x 1.5
 20
 34
 22*0084

14^{+0.30}_{+0.10} 28^{-0.10}_{-0.30}

 $14^{+0.30}_{+0.10} \quad 28^{-0.10}_{-0.30}$

 $\begin{array}{c} 20 \, {}^{+0.10}_{+0.10} & 20 \, {}^{-0.30}_{-0.30} \\ 20 \, {}^{+0.30}_{+0.10} & 40 \, {}^{-0.10}_{-0.30} \\ 30 \, {}^{+0.30}_{+0.10} & 60 \, {}^{-0.10}_{-0.30} \\ 30 \, {}^{+0.30}_{+0.10} & 60 \, {}^{-0.10}_{-0.30} \end{array}$

Lock Unit MWB-UT

Auto Switch

Bracket Combinations

Bracket com		ailable		····▶ Refer to the f	igure below.
Bracket for Bracket for cylinder	Single clevis	Double clevis	Single knuckle joint	Double knuckle joint	Clevis pivot bracket
Single clevis	—	1	—	2	—
Double clevis	3	—	4	—	9
Single knuckle joint	—	5	—	6	—
Double knuckle joint	7	—	8	—	10

No.	Appearance	No.	Appearance	
1	Single clevis + Double clevis	6	Single knuckle joint + Double knuckle joint	Made to Order
2	Single clevis + Double knuckle joint	7	Double knuckle joint + Single clevis	Ma Ma
3	Double clevis + Single clevis	8	Double knuckle joint + Single knuckle joint	
4	Double clevis + Single knuckle joint	9	Double clevis + Clevis pivot bracket	
5	Single knuckle joint + Double clevis	10	Double knuckle joint + Clevis pivot bracket	

Y-03M*1

Y-04M*1

Y-05M*1

Y-08M*1

Y-10M*1

32

40

50, 63

80

100


*1 A pin, split pins and flat washers are included.



Cylinder with Lock Double Acting, Double Rod MWBW Series ø32, ø40, ø50, ø63, ø80, ø100

RoHS

How to Order

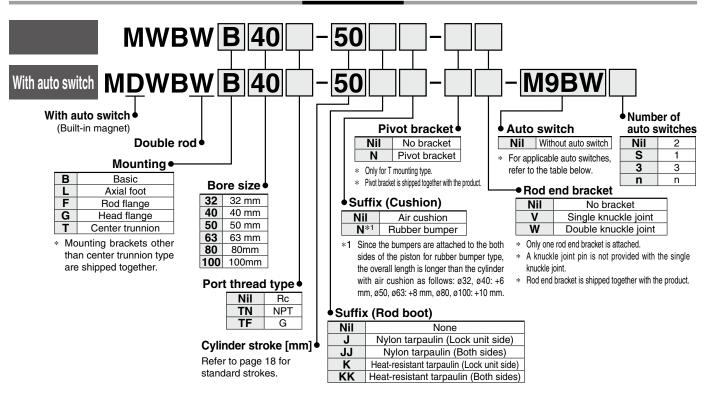

Applicable Auto Switches/Refer to the Web Catalog for further information on auto switches.

		El satuis al	light		L	oad volta.	ge	Auto swit	ch model	Lead wire length [m]				Dus unional	A	
Туре	Special function	Electrical entry	Indicator light	Wiring (Output)	D	C	AC	Tie-rod mounting			1 (M)	3 (L)	5 (Z)	Pre-wired connector		cable ad
				3-wire (NPN)				M9N	_	•			0	0	IC	
		Grommet		3-wire (PNP) 24 V	5 V, 12 V	_ [M9P	_			•	0	0	circuit		
				2-wire		12 V	V	M9B	_	•		•	0	0		1
÷		Terminal	1	3-wire (NPN)		5 V, 12 V		_	G39	—	—	—	—	_	í	
switch		conduit		2-wire		12 V		_	K39	—	—	_	—	_		
ls o			1	3-wire (NPN)	-	5 V 10 V		M9NW	_	•	•	•	0	0	IC	1
auto	Diagnostic indication			3-wire (PNP)		5 V, 12 V		M9PW	_	•		•	0	0	circuit	Relay, PLC
e (2-0	(2-color indicator)		Yes	2-wire		12 V	1 1	M9BW	_	•	•	•	0	0	_	
Solid state				3-wire (NPN)	24 V	EV 10 V	_	M9NA *1	_	0	0		0	0	IC	1
lid	Water-resistant (2-color indicator)	Grommet		3-wire (PNP)		5 V, 12 V		M9PA*1	_	0	0	•	0	0	circuit	
S				2-wire	wire	12 V		M9BA*1	_	0	0	٠	0	0	—	1
	With diagnostic output (2-color indicator)			4-wire (NPN)		5 V, 12 V		F59F	—	•	-		0	0	IC circuit]
	Magnetic field-resistant			2-wire				P3DWA	_	•	-	٠	•	0	_	
	(2-color indicator)			(Non-polar)				P4DW	—	—	-			0		
			Yes	3-wire (NPN equivalent)	—	5 V	_	A96	—					0	IC circuit	—
ء			ies				100 V	A93	—					0*2	—	
switch		Grommet	No				100 V or less	A90	_		\bullet	\bullet	•	0*2	IC circuit	Relay
			Yes				100 V, 200 V	A54		•	—		•	_		PLC
ę			No	2-wire	24 V	12 V	200 V or less	A64			—		—	—		
da		Terminal		2 1010	27 V		—	—	A33		-	—	-		_	PLC
Reed auto		conduit	Yes				100 V, 200 V	—	A34		-	-	-			Bolov
ιL.		DIN terminal	100				100 0, 200 0	_	A44	—	—	—	—	_	Relay, PLC	
	Diagnostic indication (2-color indicator)	Grommet					_	A59W	—	•	-	•				

*1 Water-resistant type auto switches can be mounted on the above models, but SMC cannot guarantee water resistance. Please contact SMC regarding water-resistant types with the above model numbers.
*2 The load voltage used is 24 VDC.

* Lead wire length symbols: 0.5 m······Nil

(Example) M9NW 1 m.....M (Example) M9NWM

Auto switches marked with "O" are produced upon receipt of order.

Since there are applicable auto switches other than those listed above, refer to page 30 for details.

The D-A9□//M9□/P3DWA□ auto switches are shipped together, but not assembled. (Only the auto switch mounting brackets are assembled for the D-A9□/M9□ before shipment.)

3 m..... I

5 m..... 7

(Example) M9NWL

(Example) M9NWZ

© 17


GSMC

Cylinder with Lock Double Acting, Double Rod **MWBW Series**



Symbol

Made to



Made to Order Individual Specifications

(i or details, refer to page 55.)									
Symbol	Specifications								
-X3000	Dimensionally compatible with the MNB series								
-X3030□	With lock status indication								

Made to Order Common Specifications Click here for details

Symbol	Specifications
-XC14	Change of trunnion bracket mounting position
-XC35	With coil scraper

Cylinder Specifications

Bore size [mm]	32	40	50	63	80	100	tio			
Action		D	ouble acting	g, Double ro	od		lec			
Fluid			А	ir			လိ			
Proof pressure			1.5	MPa			Model Selection			
Max. operating pressure		1.0 MPa								
Min. operating pressure		0.08 MPa								
Ambient and fluid	v									
temperatures		With auto	switch: -10	°C to 60°C	(NO Reezing	1)	e Ro			
Lubricant							Single Rod			
Piston speed			50 to 100	0 mm/s*1						
Stroke length tolerance	Up to	250 st: +1.0,	251 to 100	0 st: ^{+1.4} , 10	01 to 1500 s	st: +1.8 0	Double Acting,			
Cushion		Air cushion or Rubber bumper								
Port size (Rc, NPT, G)	1/8	1,	/4	3	/8	1/2	Dou			
Mounting	Basic	Axial foot,	Rod flange,	Head flang	e, Center tru	Innion	Rod			

*1 Load limits exist depending upon the piston speed when locked, mounting direction, and operating pressure.
 * Kinetic energy absorbable by the cushion mechanism is identical to that of the double acting, single rod type.

Lock Unit Specifications

Bore size [mm]	32	40	50	63	80	100				
Locking action	Exhaust locking									
Max. operating pressure	1.0 MPa									
Min. operating pressure	0.3 MPa									
Locking direction	Both directions									
Holding force (Max. static load) [N]*1	630	980	1570	2450	3920	6080				

*1 The holding force (max. static load) shows the maximum capability and does not show the normal holding capability. Be sure to select a cylinder using the method described in Model Selection (page 5).

Standard Strokes

* When using with auto switches, refer to the Minimum Stroke for Auto Switch Mounting table on pages 26 to 28.

			[mm]
Bore	Standard stroke		Max.
size	Stroke range ①	Stroke range ②	manufacturable stroke
32	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500	Lin to 1000	Up to 1800
40	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500	Up to 1000	
50	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600	Up to 1200	
63	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600	00101200	
80	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600, 700, 800	Up to 1500	
100	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600, 700, 800	00101500	

The manufacturing of intermediate strokes is possible. (Spacers are not used.)

- * Applicable strokes should be confirmed according to the usage. For details, refer to the Air Cylinders Model Selection in the **Web Catalog**. In addition, products that exceed the stroke range ① might not be able to fulfill the specifications due to deflection, etc.
- * Please consult with SMC for details on manufacturability and for part numbers when exceeding the stroke range ②.
- * When using a rod boot, a stroke range of up to 1000 mm is available. Please consult with SMC when exceeding a 1000 mm stroke.

Stopping Accuracy

Bore size [mm]	32 40 50 63 80 100								
Lock type	Exhaust locking								
Stopping accuracy [mm]	±1.0								
Conditions	 Supply Piston s Load co Solenoid y 	oressure: 0. peed: 300 r ndition: Upp valve for loc		llowed value nted on the	unlock port.				

For details of **cylinders with auto switches** ⇒ pages 24 to 30

 Auto Switch Proper Mounting Position (Detection at stroke end) and Mounting Height

Minimum Stroke for Auto Switch Mounting

· Auto Switch Mounting Brackets/Part Nos.

· Operating Range



MWBW

MWB-UT

Lock Unit

MWBW Series

Accessories

Mounting		Basic	Axial foot	Rod flange	Head flange	Center trunnion
Standard	Rod end nut	•	•	•	•	•
	Single knuckle joint	•	•	•	•	•
Option	Double knuckle joint (with pin)	•	•	•	•	•
	Rod boot	•	•	•	•	

* Refer to page 16 for dimensions and part numbers of the accessories. (Except rod boot)

Mounting Brackets/Part Nos.

Bore size [mm]	32	40	50	63	80	100
Axial foot*1	MB-L03	MB-L04	MB-L05	MNB-L06*	MB-L08	MB-L10
Rod/Head flange	MNB-F03*	MNB-F04*	MNB-F05*	MNB-F06*	MB-F08	MB-F10

*1 Order two foot brackets per cylinder.

* Accessories for each mounting bracket are as follows.

Axial foot, Rod/Head flange: Body mounting bolt

* All are common to the MB series air cylinders, except the sections marked with a "*".

Theoretical Output

OUT IN (Unit:												Jnit: N)
Bore size	Rod size	Operating	Piston area			Ope	erating	press	ure [N	IPa]		
[mm]	[mm]	direction	[mm ²]	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
32	12	IN/OUT	691	138	207	276	346	415	484	553	622	691
40	16	IN/OUT	1056	211	317	422	528	634	739	845	950	1056
50	20	IN/OUT	1649	330	495	660	825	989	1154	1319	1484	1649
63	20	IN/OUT	2803	561	841	1121	1402	1682	1962	2242	2523	2803
80	25	IN/OUT	4536	907	1361	1814	2268	2722	3175	3629	4082	4536
100	30	IN/OUT	7147	1429	2144	2859	3574	4288	5003	5718	6432	7147

* Theoretical output [N] = Pressure [MPa] x Piston area [mm²]

Weight

								[kg]
Bore	32	40	50	63	80	100		
		Lock unit	0.42	0.83	1.15	1.79	2.81	5.44
Basic weight (at 0 stroke)	Basic	sic Cylinder (at 0 stroke)		0.86	1.44	1.79	3.97	5.09
		Total	0.93	1.69	2.59	3.58	6.78	10.53
	Foot bracket (2 pcs.)		0.12	0.14	0.22	0.26	0.50	0.66
Mounting bracket weight (including bracket mounting bolts)	Rod/H	ead flange	0.24	0.32	0.53	0.74	1.45	1.83
	Trunni	on bracket	0.29	0.36	0.48	0.80	1.55	1.69
Additional weight per 50	0 mm o	fstroke	0.15	0.24	0.37	0.38	0.61	0.82
	Single	knuckle joint	0.15	0.23	0.26	0.26	0.60	0.83
Accessories	Double (with p	e knuckle joint in)	0.22	0.37	0.43	0.43	0.87	1.27

Calculation example)

- MWBWL32-100 (Axial foot, ø32, 100 mm stroke)
- Basic weight…0.42 (Lock unit, ø32) • Basic weight…0.51 (Cylinder, ø32)
- Additional weight ----0.15/50 mm stroke
 Cylinder stroke---100 mm stroke
- Foot bracket…0.12
 - 0.42 + 0.51 + (0.15/50) x 100 + 0.12 = **1.35 kg**


Rod Boot Material

Symbol	Material	Max. ambient temp.
J	Nylon tarpaulin	70°C
К	Heat-resistant tarpaulin	110°C*1

*1 Max. ambient temperature for rod boot itself

Cylinder with Lock Double Acting, Double Rod **MWBW Series**



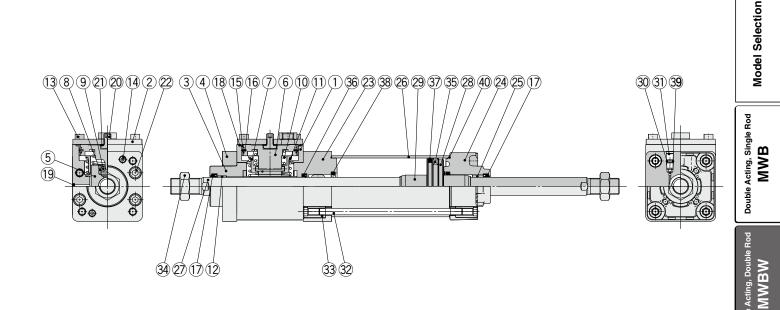

Component Parts

2 3 4 5	Description Brake unit Cap Collar Retaining plate	Material Aluminum alloy Rolled steel Aluminum alloy	Qty. 1 1	Note Hard anodized
2 3 4 5	Cap Collar	Rolled steel	•	
3 4 5	Collar		1	Zing obromoted
4 5		Aluminum allov		Zinc chromated
5	Retaining plate	y daminam anoy	1	Chromated
	JI	Aluminum alloy	1	Anodized
6	Brake pad	Cast iron	1	
	Piston A	Aluminum alloy	1	
7	Roller holder	Carbon steel	1	
8	Roller receiver	Stainless steel	2	Heat treated
9	Needle roller	Carbon steel	2	Heat treated
10	Piston spring	Spring steel	1	Zinc chromated
11	Roller spring	Spring steel	1	Zinc chromated
12	Bushing A	Bearing alloy	1	
13	Hexagon socket head cap screw	Alloy steel	4	
14	Hexagon socket head cap screw	Alloy steel	2	
15	Wear ring A	Resin	2	
16	Piston seal A	NBR	1	
17	Rod seal A	NBR	2	
18	Gasket	NBR	1	
19	Element	Bronze	1	
20	Release bolt	Alloy steel	1	
21	Seal washer	NBR + Stainless steel	1	
22	Hexagon socket head cap screw	Alloy steel	4	
23	Rod cover A	Aluminum alloy	1	Anodized
24	Rod cover B	Aluminum die-cast	1	Chromated
25	Bushing B	Bearing alloy	1	
26	Cylinder tube	Aluminum alloy	1	Hard anodized
27	Piston rod	Carbon steel	1	Hard chrome plating
28	Piston B	Aluminum alloy	1	

Component Parts

No.	Description	Material	Qty.	Note
29	Cushion ring	Aluminum alloy	2	Anodized
30	Cushion valve	Steel wire	2	Zinc chromated
31	Retaining ring	Spring steel	2	ø40 to ø100
32	Tie-rod	Carbon steel	4	Zinc chromated
33	Tie-rod nut	Carbon steel	8	Zinc chromated
34	Rod end nut	Carbon steel	2	Zinc chromated
35	Magnet	—	(1)	
36	Rod seal B	NBR	1	
37	Piston seal B	NBR	1	
38	Cushion seal	Urethane	2	
39	Cushion valve seal	NBR	2	
40	Cylinder tube gasket	NBR	2	

Replacement Parts/Seal Kit

Bore size [mm]	Kit no.	Contents
32	MWBW32-PS	
40	MWBW40-PS	A set of 🗊 Rod seal A,
50	MWBW50-PS	36 Rod seal B, 37 Piston seal B,
63	MWBW63-PS	38 Cushion seal, and
80	MWBW80-PS	Oplinder tube gasket
100	MWBW100-PS	

* Never dissemble the lock unit. It should be replaced as a unit. Refer to page 42 for the part numbers for placing an order. The seal kit shown above contains the rod seal for the cylinder and lock unit. Order the seal kit suitable for the cylinder bore size.

* The seal kit shown above includes a grease pack. (ø32, ø40, ø50: 10 g, ø63, ø80: 20 g, ø100: 30 g)

Order with the following part number when only the grease pack is needed. Grease pack part number: GR-S-010 (10 g), GR-S-020 (20 g)




Lock Unit MWB-UT

Auto Switch

Made to Order

MWBW Series

Dimensions

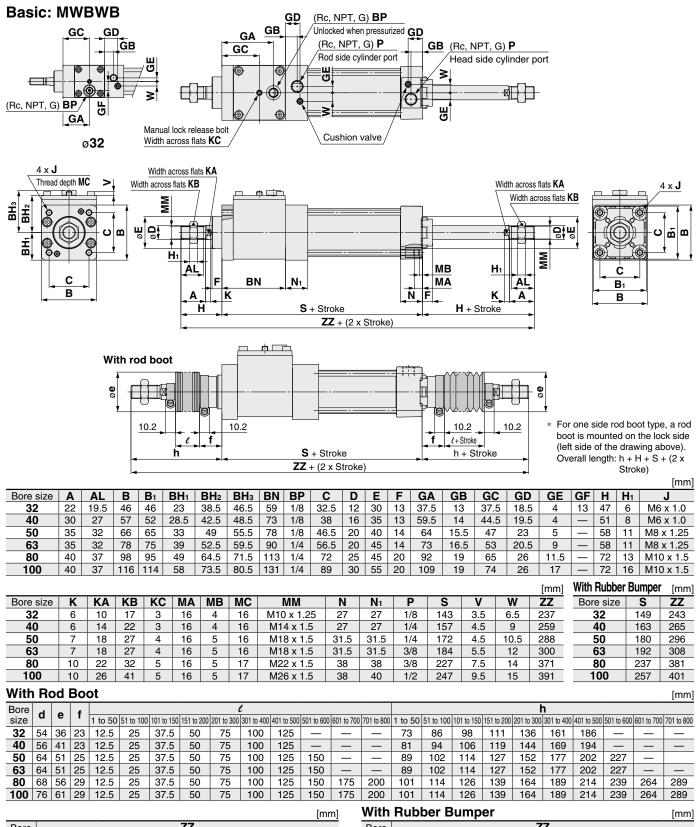

										[i i i i i i i
Bore					Z	Z				
size	1 to 50	51 to 100	101 to 150	151 to 200	201 to 300	301 to 400	401 to 500	501 to 600	601 to 700	701 to 800
32	289	315	339	365	415	465	515	—	—	_
40	319	345	369	395	445	495	545			
50	350	376	400	426	476	526	576	626	—	_
63	362	388	412	438	488	538	588	638	—	—
80	429	455	479	505	555	605	655	705	755	805
100	449	475	499	525	575	625	675	725	775	825
						·		·		

WILLI	RUD		ump	er					[mm]	
Bore					Z	Z				
size	1 to 50	51 to 100	101 to 150	151 to 200	201 to 300	301 to 400	401 to 500	501 to 600	601 to 700	701 to 800
32	295	321	345	371	421	471	521	—	—	
40	325	351	375	401	451	501	551	—	—	—
50	358	384	408	434	484	534	584	634	—	—
63	370	396	420	446	496	546	596	646		—
80	439	465	489	515	565	615	665	715	765	815
100	459	485	509	535	585	635	685	735	785	835

* ZZ indicates dimensions for double side rod boot.



Cylinder with Lock Double Acting, Double Rod **MWBW Series**

Dimensions: With Mounting Bracket

* Refer to Basic (B) for other dimensions.

Model Selection

Double Acting, Single Rod **MWB**

e Acting, Double Rod **MWBW**


Dol


Lock Unit MWB-UT

Auto Switch

Made to Order

Axial foot: MWBWL

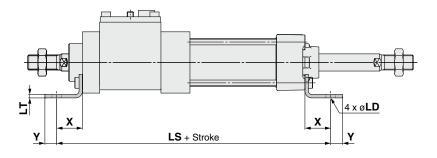


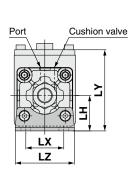


									[mm]
Bore size	LD	LH	LS	LT	LX	LY	LZ	X	Y
32	7	30	187	3.2	32	68.5	50	22	9
40	9	33	205	3.2	38	75.5	55	24	11
50	9	40	226	3.2	46	89	70	27	11
63	12	48	238	3.6	56	100.5	80	27	14
80	12	55	287	4.5	72	119.5	100	30	14
100	14	65	311	4.5	89	138.5	120	32	16

With Rubber Bumper [mm]								
Bore size	LS							
32	193							
40	211							
50	234							
63	246							
80	297							
100	321							

Rod flange: MWBWF



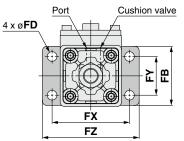


								[mm]
Bore size	FB	FD	Fd	FE	FT	FX	FY	FZ
32	56	7	30	3	10	72	38	87
40	65	9	35	3	10	83	46	101
50	77	9	40	2	12	100	52	120
63	92	9	45	2	12	115	62	135
80	100	12	45	4	16	126	63	153
100	120	14	55	4	16	150	75	178


MWBW Series

Dimensions: With Mounting Bracket

* Refer to Basic (B) for other dimensions.


Head flange: MWBWG

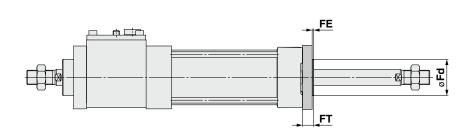


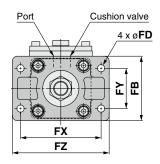

								[mm]
Bore size	FB	FD	Fd	FE	FT	FX	FY	FZ
32	56	7	24.5	3	10	72	38	87
40	65	9	29.5	3	10	83	46	101
50	77	9	35.5	2	12	100	52	120
63	92	9	38.5	2	12	115	62	135
80	100	12	41	4	16	126	63	153
100	120	14	46	4	16	150	75	178

Center trunnion: MWBWT

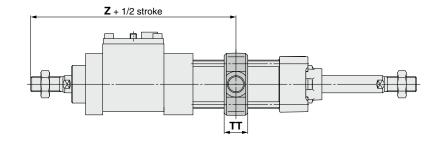


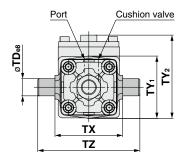


							[mm]
Bore size	TDe8	TT	ТΧ	TY ₁	TY ₂	ΤZ	Z
32	12 ^{-0.032} -0.059	17	50	49	71	74	148
40	16 ^{-0.032} -0.059	22	63	58	77.5	95	166
50	16 ^{-0.032} -0.059	22	75	71	91	107	183
63	20 ^{-0.040} -0.073	28	90	87	103	130	195
80	20 ^{-0.040} -0.073	34	110	110	126.5	150	242
100	25 ^{-0.040} -0.073	40	132	136	148.5	182	262

With Rubber Bu	imper [mm]
Bore size	Z
32	151
40	169
50	187
63	199
80	247
100	267

MWB Series Auto Switch Mounting

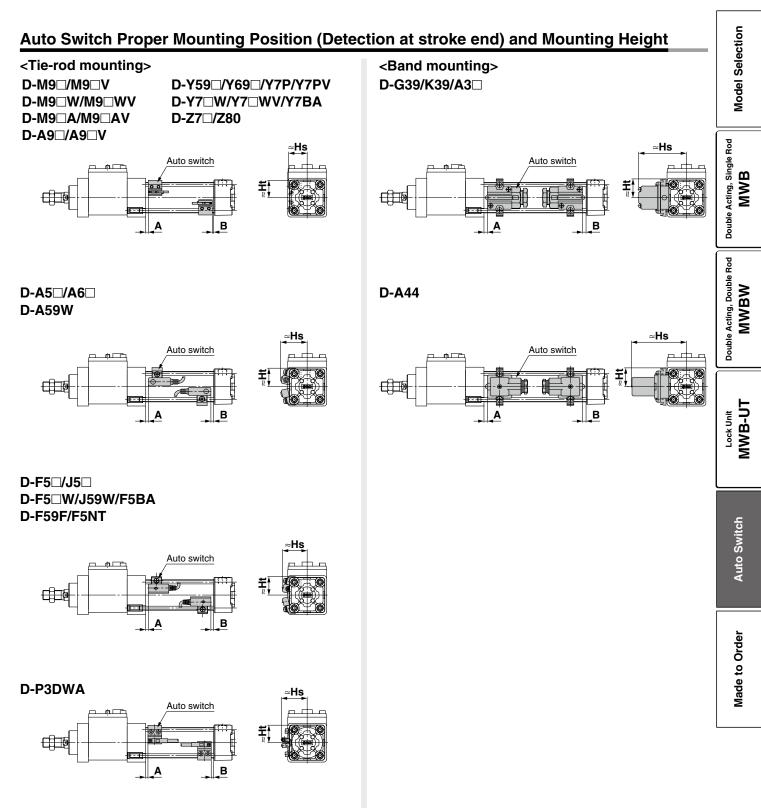

D-P4DW



Auto Switch Proper Mounting Position (Detection at stroke end) and Mounting Height

Auto Sw	itch l	Prop	er Mo	ounti	ing P	ositi	on													[mm]
Auto switch model Bore	D-M9 D-M9 D-M9 D-M9 D-M9 D-M9	□V □W □WV □A	D-AS D-AS		D-F D-J D-F	59	D-F5NT		D-A5 D-A6 D-A6		D-A	59W	D-G39 D-K39 D-A3⊡ D-A44		D-Y59 D-Y69 D-Y7P D-Y7PV D-Y7H D-Y7 W D-Y7 WV D-Z8 D-Z8		D-P3DWA		D-P4DW	
size	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В
32	10	8	6	4	6.5	4.5	11.5	9.5	0	0	4	2	0	0	3.5	1.5	5.5	3.5	3	1
40	9	9	5	5	5.5	5.5	10.5	10.5	0	0	3	3	0	0	2.5	2.5	4.5	4.5	2	2
50	10	9	6	5	6.5	5.5	11.5	10.5	0	0	4	3	0	0	3.5	2.5	5.5	4.5	3	2
63	10	9	6	5	6.5	5.5	11.5	10.5	0	0	4	3	0	0	3.5	2.5	5.5	4.5	3	2
80	14.5	11.5	10.5	7.5	11	8	16	13	4.5	1.5	8.5	5.5	4.5	1.5	8	5	10	7	7.5	4.5
100	14	12	10	8	10.5	8.5	15.5	13.5	4	2	8	6	4	2	7.5	5.5	9.5	7.5	7	5

* Models with rubber bumper have different dimensions for auto switch proper mounting positions (A and B). Add the following values to both A and B: 3 mm (ø32 and 40), 4 mm (ø50 and 63), 5 mm (ø80 and 100).

* Adjust the auto switch after confirming the operating conditions in the actual setting.

Auto Switch Mounting Height

Auto Sw	itch I	Mour	nting	Heig	ght																	[mm]
Auto switch model Bore	D-M9 D-M9 D-M9 D-A9	9⊡W 9⊡A	D-A	9 □ V	D-M9 D-M9 D-M9	Ū₩V	D-F5 D-J5 D-F5 D-F5 D-F5 D-F5	9 59F 5⊡W 59W 59W	D-A: D-A: D-A:	6	D-G D-K D-A	39	D-A	44	D-Y5 D-Y7 D-Y7 D-Y7 D-Z7 D-Z8	′P ′□W ′BA	D-Y69 D-Y71 D-Y71	PV	D-P3	DWA	D-P4	4DW
size	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht	Hs	Ht
32	24.5	23	27.5	23	30.5	23	32.5	25	35	24.5	67	27.5	77	27.5	25.5	23	26.5	23	38	31	38	31
40	28.5	25.5	31.5	25.5	34	25.5	36.5	27.5	38.5	27.5	71.5	27.5	81.5	27.5	29.5	26	30	26	39	25.5	42	33
50	33.5	31	36	31	38.5	31	41	34	43.5	34.5	77	_	87		33.5	31	34.5	31	43	31	46.5	39
63	38.5	36	40.5	36	43	36	46	39	48.5	39.5	83.5		93.5		39	36	40	36	48	36	51.5	44
80	46.5	45	49	45	52	45	52.5	46.5	55	46.5	92.5	_	103		47.5	45	48.5	45	56.5	45	58	51.5
100	54	53.5	57	53.5	59.5	53.5	59.5	55	62	55	103		113.5		55.5	53.5	56.5	53.5	64.5	53.5	65.5	60.5

Auto Switch Mounting **MWB** Series

Minimum Stroke for Auto Switch Mounting

	Brackets except Center Ti		n: Number of auto switches [mm]	Model Selection
uto switch mode	el Number of auto switches	ø 32 , ø 40 , ø 50 , ø 63	ø 80 , ø100	ect
	2 (Different surfaces, same surface)	15		Sel
D-M9□ D-M9□W	· ·	15 + 40 <u>(n</u>	- 2)	le le
	n	15 + 40 - (n = 2, 4, 6, -)	2 8)*1	lod
	2 (Different surfaces, same surface)			
D-M9⊡V	1	10		
D-M9⊟WV		10 + 30 ⁽ⁿ	-2)	Rod
	n	10 + 30 ⁽ⁿ) (n = 2, 4, 6,	2 8)*1	Double Acting, Single Rod MWB
	2 (Different surfaces, same surface)	15		Acting, Sin MWB
D-M9⊡A	1			MV MV
	n	15 + 40 <u>(n</u>	<u>-2)</u>	le A
		(n = 2, 4, 6,)*1	qno
	2 (Different surfaces, same surface)	15		Ľ
D-M9⊡AV	1		2)	g
D	n	15 + 30 <u>(n</u>	<u>-2)</u>	le R
		(n = 2, 4, 6,	8····)*1	
	2 (Different surfaces, same surface)	15		B
D-A9 □	· ·	45 40 ⁽⁰	-2)	Double Acting, Double Rod MWBW
	n	$15 + 40 \frac{(n)}{(n-2)}$		ble
	2 (Different surfaces come surface)	(n = 2, 4, 6,	8)*'	Dou
	2 (Different surfaces, same surface) 1	10		
D-A9⊡V		10 + 30 <u>(n</u>	-2)	
	n	(n = 2, 4, 6, -1)		
	2 (Different surfaces)	35		Lock Unit MWB-UT
	2 (Same surface)	100		Z S
D-G39	n (Different surfaces)	35 + 30 (n		ΞĚ
D-K39 D-A3⊡		(n = 2, 3, 4		
D-А3⊡	n (Same surface)	100 + 100 (n (n = 2, 3, 4		
	1	10	+···)	
	2 (Different surfaces)	35		_ c
	2 (Same surface)	55		itc
14	n (Different surfaces)	35 + 30 (n		Sw
D-A44		(n = 2, 3, 4 55 + 50 (n		Auto Switch
	n (Same surface)	(n = 2, 3, 4		٦٢ ٩٢
	1	10		
D-F5	2 (Different surfaces, same surface)	15	25	
D-J59 D-F5⊡W		$15 + 55 \frac{(n-2)}{2}$	$25 + 55 \frac{(n-2)}{2}$	
D-J59W	n (Same surface)	$(n = 2, 4, 6, 8)^{*1}$	$(n = 2, 4, 6, 8)^{*1}$	Made to Order
D-F5BA				ō
D-F59F	1 2 (Different surfaces, same surface)	10	25	b
	2 (Different surfaces, same surface)	15	20	ade
D-A5□ D-A6□	· · ·	$15 + 55 \frac{(n-2)}{2}$	$20 + 55 \frac{(n-2)}{2}$	Ξ
	n (Same surface)	$(n = 2, 4, 6, 8)^{*1}$	$(n = 2, 4, 6, 8)^{*1}$	
	2 (Different surfaces, same surface)	20	25	I
		$20 + 55\frac{(n-2)}{2}$	$25 + 55 \frac{(n-2)}{2}$	I
D-A59W	n (Same surface)	$(n = 2, 4, 6, 8)^{*1}$	$(n = 2, 4, 6, 8)^{*1}$	I
	1	15	25	I
	2 (Different surfaces, same surface)	15	25	I
		$15 + 55 \frac{(n-2)}{2}$	$25 + 55 \frac{(n-2)}{2}$	I
D-F5NT	n (Same surface)	$(n = 2, 4, 6, 8)^{*1}$	(n = 2, 4, 6, 8···)*1	I
	1	10	25	I
D-Y59	2 (Different surfaces, same surface)	15		1
D-Y7P D-Y7⊡W	1			1
D-77	n	15 + 40 <u>(n</u>	$\frac{-2}{2}$	1
D-Z80		(n = 2, 4, 6,	8···)*1	1

*1 When "n" is an odd number, an even number that is one larger than the odd number is to be used for the calculation.

SMC

MWB Series

Minimum Stroke for Auto Switch Mounting

Mounting Brackets except Center Trunnion

Mounting Br	ackets except Cen	n: Number of auto switches [mm]
Auto switch model	Number of auto switches	ø 32, ø 40 , ø 50 , ø 63 , ø 80 , ø100
D-Y69□	2 (Different surfaces, same surface) 1	10
D-Y7PV D-Y7⊟WV	n	$10 + 30 \frac{(n-2)}{2}$ (n = 2, 4, 6, 8)*1
	2 (Different surfaces, same surface) 1	20
D-Y7BA	n	$20 + 45 \frac{(n-2)}{2}$ (n = 2, 4, 6, 8)*1
	2 (Different surfaces, same surface) 1	15
D-P3DWA	n	$15 + 50 \frac{(n-2)}{2}$ (n = 2, 4, 6, 8)*1
	2 (Different surfaces, same surface) 1	15
D-P4DW	n	$\frac{15 + 65\frac{(n-2)}{2}}{(n=2, 4, 6, 8)^{*1}}$

*1 When "n" is an odd number, an even number that is one larger than the odd number is to be used for the calculation.

Center Trunnion

Center Trunr	nion					n: Number of	auto switches [mm]
Auto switch model	Number of auto switches	ø 32	ø 40	ø 50	ø 63	ø 80	ø100
D-M9	2 (Different surfaces, same surface) 1	75	8	0	85	90	95
D-M9⊟W	n	$75 + 40 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	80 + 40 (n = 4, 8, 1	0 <u>(n − 4)</u> 12, 16…)* ²		$90 + 40 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	
D-M9⊡V	2 (Different surfaces, same surface) 1	50	5		60	65	70
D-M9⊡WV	n	$50 + 30 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	55 + 30 (n = 4, 8, 1	0 <u>(n − 4)</u> 12, 16…)*2		$65 + 30 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	
	2 (Different surfaces, same surface) 1	80	8		90	95	100
D-M9⊟A	n	$\frac{80 + 40 \frac{(n-4)}{2}}{(n = 4, 8, 12, 16 \dots)^{*2}}$	85 + 40 (n = 4, 8, 1	D. <u>(n − 4)</u> 12, 16…)*2	2	$95 + 40 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	<u> </u>
	2 (Different surfaces, same surface) 1	55	6		65	70	75
D-M9⊡AV	n	$55 + 30 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	60 + 30 (n = 4, 8, 1	4	2	$70 + 30 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	<u> </u>
	2 (Different surfaces, same surface) 1	70	7		80	85	95
D-A9□	n	$70 + 40 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	75 + 40 (n = 4, 8, 1	0. <u>(n − 4)</u> 12, 16…)*2		$85 + 40\frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	
	2 (Different surfaces, same surface) 1	45	5		55	60	70
D-A9⊡V	n	$45 + 30 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	50 + 30 (n = 4, 8, 1	0 <u>(n − 4)</u> 12, 16…)* ²	2	$60 + 30 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	$70 + 30 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2

*2 When "n" is an odd number, a multiple of 4 that is larger than the odd number is to be used for the calculation.

Minimum Stroke for Auto Switch Mounting

Center Trun	nion					n: Number of	auto switches [mm]	L
Auto switch model	Number of auto switches	ø 32	ø 40	ø 50	ø 63	ø 80	ø100	i iii
	2 (Different surfaces)	60		5	75	80	85	
	2 (Same surface)	90	9	5	100	105	110	Se
D-G39 D-K39	n (Different surfaces)	60 + 30 (n − 2) (n = 2, 4, 6, 8…)*1	65 + 30 (n = 2, 4) (n – 2)	75 + 30 (n - 2) (n = 2, 4, 6, 8···)*1	80 + 30 (n - 2) (n = 2, 4, 6, 8···)*1	85 + 30 (n − 2) (n = 2, 4, 6, 8···)*1	Model Selection
D-A3	n (Same surface)	90 + 100 (n - 2) (n = 2, 4, 6, 8)*1	95 + 10 (n = 2, 4		100 + 100 (n - 2) (n = 2, 4, 6, 8)*1	$\frac{105 + 100 (n - 2)}{(n = 2, 4, 6, 8)^{*1}}$	110 + 100 (n − 2) (n = 2, 4, 6, 8···)*1	Σ
	1	60	6	5	75	80	85	σ
	2 (Different surfaces) 2 (Same surface)	70	7	5	8	0	85	Double Acting, Single Rod MWB
D-A44	n (Different surfaces)	70 + 30 (n - 2) (n = 2, 4, 6, 8···)*1	75 + 30 (n = 2, 4,		80 + 30 (n = 2, 4) (n − 2) , 6, 8…)* ¹	85 + 30 (n − 2) (n = 2, 4, 6, 8…) ^{*1}	Acting, Sin MWB
	n (Same surface)	70 + 50 (n - 2) (n = 2, 4, 6, 8…)*1	75 + 50 (n = 2, 4) (n − 2) , 6, 8…)*1	85 + 50 (n − 2) (n = 2, 4, 6, 8…)*1	ible Act N
	1	70	7	5	8	0	85	Dou
D-F5□/J59	2 (Different surfaces, same surface)	90	-	5	110	115	120	
D-F5⊡W D-J59W D-F5BA	n (Same surface)	$90 + 55 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	95 + 55 (n = 4, 8, 1		$110 + 55 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	$\frac{115 + 55 \frac{(n-4)}{2}}{(n = 4, 8, 12, 16 \dots)^{*2}}$	$120 + 55 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	e Rod
D-F59F	1	90		5	110	115	120	
	2 (Different surfaces, same surface)	100	1()5	120	125	130	<u>ă</u>
D-F5NT	n (Same surface)	$\frac{100 + 55 \frac{(n-4)}{2}}{(n = 4, 8, 12, 16 \dots)^{*2}}$	105 + 5	5 (n − 4) 2 12, 16…)*2	$120 + 55 \frac{(n-4)}{2}$	$\frac{125 + 55 \frac{(n-4)}{2}}{(n = 4, 8, 12, 16 \dots)^{*2}}$	$130 + 55 \frac{(n-4)}{2}$	Double Acting, Double Rod MWBW
	1	100	(11 = 4, 8,		120	125	130	ldu
	2 (Different surfaces, same surface)	100			120	125	130	Õ
D-A5	1	6	-	80	105	110	115	
D-A6□	n (Same surface)	60 + 55	$5\frac{(1-4)}{2}$	$80 + 55 \frac{(n-4)}{2}$		$110 + 55 \frac{(n-4)}{2}$		· .
		(n = 4, 8, 1	12, 16…)* ²	(n = 4, 8, 12, 16…)*2	(n = 4, 8, 12, 16…)*2			1 = 5
	2 (Different surfaces, same surface)	60	70	85	110	115	120	5.6
D-A59W	n (Same surface)	$60 + 55 \frac{(n-4)}{2}$ (n = 4 8 12 16)*2	$70 + 55 \frac{(n-4)}{2}$ (n = 4 8 12 16)*2	$85 + 55 \frac{(n-4)}{2}$ (n = 4 8 12 16)*2	$\frac{110 + 55 \frac{(n-4)}{2}}{(n = 4, 8, 12, 16)^{*2}}$	$115 + 55 \frac{(n-4)}{2}$ (n = 4 8 12 16)*2	$120 + 55 \frac{(n-4)}{2}$ (n = 4 8 12 16)*2	Lock Unit MWB-UT
	1	60	70	85	110	115	120	-
D-Y59□ D-Y7P	2 (Different surfaces, same surface) 1	80	85		00	95	100	
D-Y7⊡W D-Z7⊡ D-Z80	n		$85 + 40 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2		0 (n − 4) 2 12, 16…)*2	$95 + 40 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	$\frac{100 + 40 \frac{(n-4)}{2}}{(n = 4, 8, 12, 16)^{*2}}$	Ę
D-200	2 (Different surfaces, same surface)		(11 = 4, 0, 12, 10)	(11 – 4, 0,				/itc
D-Y69□ D-Y7PV	1	60	_	5	70	75	85	Auto Switch
D-Y7⊡WV	n	$60 + 30 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	65 + 30 (n = 4, 8,	0 <u>−4</u> 12, 16)*2	$70 + 30\frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	$75 + 30\frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2		Aut
	2 (Different surfaces, same surface) 1	85	9	0	100	105	110	
D-Y7BA	n	$85 + 45 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	90 + 43 (n = 4 8	5 <u>(n − 4)</u> 12, 16…)*²		$105 + 45 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	$110 + 45 \frac{(n-4)}{2}$ (n = 4 8 12 16)*2	ler
	2 (Different surfaces, same surface) 1	80		5		0	95	o Orc
D-P3DWA	n	$80 + 50 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	85 + 50 (n = 4, 8,	0 <u>(n − 4)</u> 12, 16…)* ²	90 + 5 (n = 4, 8,	0 <u>(n − 4)</u> 12, 16…)* ²	$95 + 50 \frac{(n-4)}{2}$ (n = 4, 8, 12, 16)*2	Made to Order
	2 (Different surfaces, same surface) 1		20		30		40	
D-P4DW	n	120 + 6			$55\frac{(n-4)}{2}$	140 + 6	<u> </u>	
		(n = 4, 8, 1	12, 16…)* ²	(n = 4, 8,	12, 16…)* ²	(n = 4, 8,	12, 16…)* ²	

*1 When "n" is an odd number, an even number that is one larger than the odd number is to be used for the calculation.

*2 When "n" is an odd number, a multiple of 4 that is larger than the odd number is to be used for the calculation.

MWB Series

Auto Switch Mounting Brackets/Part Nos.

			Bore si	ze [mm]		
Auto switch model	ø 32	ø 40	ø 50	ø 63	ø 80	ø100
D-M9=//M9=V D-M9=W/M9=WV D-M9=A/M9=AV D-A9=/A9=V	BMB5-032	BMB5-032	BA7-040	BA7-040	BA7-063	BA7-063
D-A3□/A44 D-G39/K39	BMB2-032	BMB2-040	BMB1-050	BMB1-063	BMB1-080	BMB1-100
D-F5□/J59 D-F5□W/J59W D-F59F/F5BA D-F5NT D-A5□/A6□/A59W	BT-03	BT-03	BT-05	BT-05	BT-06	BT-06
D-P3DWA	BA10-032S	BA10-040S	BA10-050S	BA10-050S	BA10-063S	BA10-063S
D-P4DW	BMB3T-040	BMB3T-040	BMB3T-050	BMB3T-050	BMB3T-080	BMB3T-080
D-Y59□/Y69□ D-Y7P/Y7PV D-Y7□W/Y7□WV D-Y7BA D-Z7□/Z80	BMB4-032	BMB4-032	BMB4-050	BMB4-050	BA4-063	BA4-063

[Stainless Steel Mounting Screw]

The following stainless steel mounting screw kit (including set screws) is available. Use it in accordance with the operating environment. (Since the auto switch mounting bracket is not included, order it separately.)

BBA1: For D-A5/A6/F5/J5 types

* Refer to the Web Catalog for details on the BBA1.


The above stainless steel screws are used when a cylinder is shipped with the D-F5BA auto switch. When only one auto switch is shipped independently, the BBA1 is attached.

When using the D-M9 A(V) or Y7BA, do not use the steel set screws which are included with the auto switch mounting brackets above (BMB5-032, BA7-

Order a stainless steel screw kit (BBA1) separately, and use the M4 x 6 L stainless steel set screws included in the BBA1.



· The figure shows the mounting example for

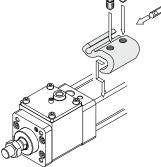


Operating Range

						[mm]
Auto switch model			Bore	size		
Auto switch model	32	40	50	63	80	100
D-M9□/M9□V D-M9□W/M9□WV D-M9□A/M9□AV	4	4.5	4.5	4.5	5	6
D-Y59□/Y69□ D-Y7P/Y7□V D-Y7□W/Y7□WV D-Y7BA	5.5	5.5	7	7.5	6.5	5.5
D-F5□/J59 D-F5□W/J59W D-F5BA/F5NT D-F59F	3.5	4	4	4.5	4.5	4.5
D-G39/K39	9	9	9	10	10	11
D-P3DWA	3	4.5	4.5	5	5	5.5
D-P4DW	4	4	4	4.5	4	4.5
D-A9□/A9□V	7	7.5	8.5	9.5	9.5	10.5
D-Z7□/Z80	7.5	8.5	7.5	9.5	9.5	10.5
D-A5□/A6□	9	9	10	11	11	11
D-A59W	13	13	13	14	14	15
D-A3□/A44	9	9	10	11	11	11

 $\ast\,$ Values which include hysteresis are for reference purposes only. They are not a guarantee (assuming approximately $\pm30\%$ dispersion) and may change substantially depending on the ambient environment.

<Mounting example for ø32, D-P3DWA>

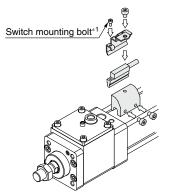

*1 The switch mounting bolt is supplied with the switch.


Auto Switch Mounting **MWB** Series

Туре	Model	Electrical entry	Features	
	D-M9NV/M9PV/M9BV			
	D-Y69A/Y69B/Y7PV		—	
	D-M9NWV/M9PWV/M9BWV		Diagnostic indication	
	D-Y7NWV/Y7PWV/Y7BWV	Grommet (Perpendicular)	(2-color indicator)	
	D-M9NAV/M9PAV/M9BAV		Water-resistant (2-color indicator)	
	D-P3DW		Magnetic field-resistant	1
	D-P4DW		(2-color indicator)	
Solid state	D-F59/F5P/J59			I
	D-Y59A/Y59B/Y7P			I
	D-Y7H			I
	D-F59W/F5PW/J59W	Grommet (In-line)	Diagnostic indication	I
	D-Y7NW/Y7PW/Y7BW	Cioniner (in-line)	(2-color indicator)	
	D-F5BA/Y7BA		Water-resistant (2-color indicator)	
	D-F5NT		With timer	
	D-P5DW		Magnetic field-resistant (2-color indicator)	
	D-A93V/A96V	Grommet (Perpendicular)	_	
Reed	D-A90V	Cionine (i elpendicular)	Without indicator light	
neeu	D-A53/A56/Z73/Z76	Grommet (In-line)	_	
	D-A67/Z80		Without indicator light	
	or is also available for solid state switc b contact) solid state auto switches (D		b Catalog. wailable. For details, refer to the Web Catalo	og.

Prior to Use Auto Switch Connections and Examples

Source Input Specifications

Sink Input Specifications

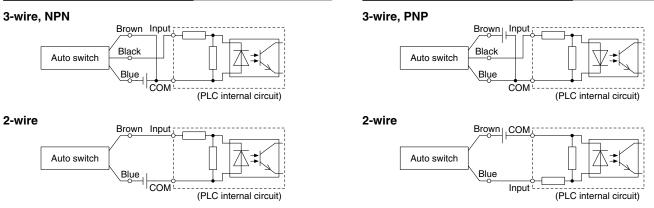


Connect according to the applicable PLC input specifications, as the connection method will vary depending on the PLC input specifications.

Examples of AND (Series) and OR (Parallel) Connections


* When using solid state auto switches, ensure the application is set up so the signals for the first 50 ms are invalid.

3-wire AND connection for NPN output


(Using relays)

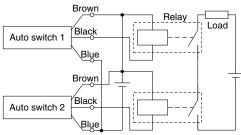

3-wire AND connection for PNP output (Using relays)

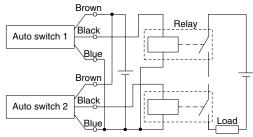


2-wire AND connection

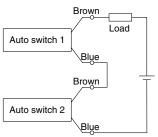


When two auto switches are connected in series, a load may malfunction because the load voltage will decline when in the ON state. The indicator lights will light up when both of the auto switches are in the ON state. Auto switches with a load voltage less than 20 V


cannot be used.



Example: Power supply is 24 VDC Internal voltage drop in auto switch is 4 V.


(Performed with auto switches only)

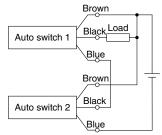

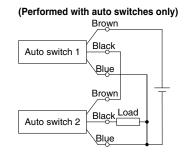

2-wire OR connection


SMC

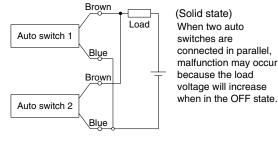


```
Load voltage at OFF = Leakage current x 2 pcs. x
Load impedance
= 1 mA x 2 pcs. x 3 k\Omega
= 6 V
```

Example: Load impedance is 3 kΩ. Leakage current from auto switch is 1 mA.

3-wire OR connection for NPN output

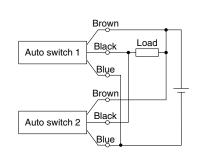


3-wire OR connection for PNP output

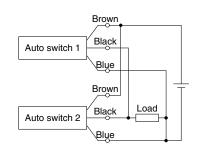


(Reed)

Because there is no current leakage, the load voltage will not increase when turned OFF. However, depending on the number of auto switches in the ON state, the indicator lights may sometimes grow dim or not light up, due to the dispersion and reduction of the current flowing to the auto switches.

Lock Unit **MWB-UT** Series 32, 40, 50, 63, 80, 100

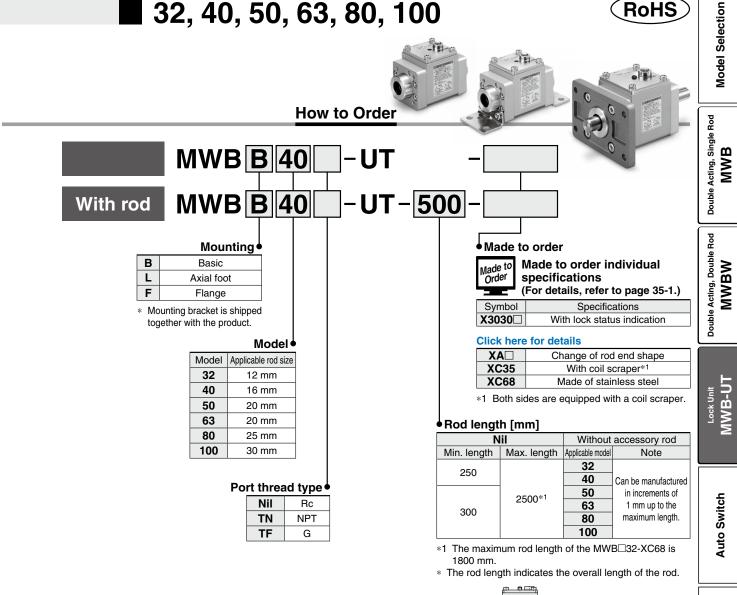



* Rod is shipped together with the product.

Weight

							[kg]
Bore size		32	40	50	63	80	100
Basic weight	Lock unit	0.59	1.09	1.51	2.32	4.41	7.00
Mounting bracket weight (including bracket mounting bolts)	Foot bracket (2 pcs.)	0.12	0.14	0.22	0.26	0.50	0.66
	Flange	0.24	0.32	0.53	0.74	1.45	1.83
Additional rod weig	0.04	0.08	0.12	0.12	0.19	0.27	

Calculation example)

MWBL40-UT-500 (Axial foot, Model 40, With a 500 mm rod)

• Basic weight1.09 (Lock unit, Model 40)

Additional weight0.08/50 mm

Rod length500 mm

• Axial foot0.14

1.09 + (0.08/50) x 500 + 0.14 = 2.03 kg

Specifications

Model	32	40	50	63	80	100
Applicable rod size [mm]*2	ø12 f8	ø16 f8	ø20 f8	ø20 f8	ø25 f8	ø30 f8
Locking action	Exhaust locking					
Proof pressure	1.5 MPa					
Max. operating pressure	1.0 MPa					
Min. operating pressure	0.3 MPa					
Locking direction	Both directions					
Holding force (Max. static load) [N]*1	1 630 980 1570 2450 3920 6			6080		
Stopping accuracy [mm]	±1.0					

*1 The holding force (max. static load) shows the maximum capability and does not show the normal holding capability. Refer to pages 5 and 6 to select an appropriate lock unit.


*2 The applicable rod size affects the holding force, so use a rod with the rod size tolerance shown in the table above. For the shape of the rod end to be inserted, refer to page 44.


Made to Order

RoHS

MWB-UT Series

Construction

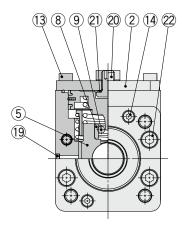

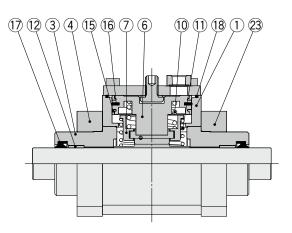

Component Parts


No.	Description	Material	Qty.	Note
1	Brake unit	Aluminum alloy	1	Hard anodized
2	Сар	Rolled steel	1	Zinc chromated
3	Collar	Aluminum alloy	2	Chromated
4	Retaining plate	Aluminum alloy	1	Anodized
5	Brake pad	Cast iron	1	
6	Piston A	Aluminum alloy	1	
7	Roller holder	Carbon steel	1	
8	Roller receiver	Stainless steel	2	Heat treated
9	Needle roller	Carbon steel	2	Heat treated
10	Piston spring	Spring steel	1	Zinc chromated
11	Roller spring	Spring steel	1	Zinc chromated
12	Bushing	Bearing alloy	2	

No.	Description	Material	Qty.	Note
13	Hexagon socket head cap screw	Alloy steel	4	
14	Hexagon socket head cap screw	Alloy steel	2	
15	Wear ring	Resin	2	
16	Piston seal	NBR	1	
17	Rod seal	NBR	2	
18	Gasket	NBR	1	
19	Element	Bronze	1	
20	Release bolt	Alloy steel	1	
21	Seal washer	NBR + Stainless steel	1	
22	Hexagon socket head cap screw	Alloy steel	4	
23	Unit cover	Aluminum alloy	1	

* The lock unit cannot be disassembled.

Lock Unit **MWB-UT** Series

Dimensions

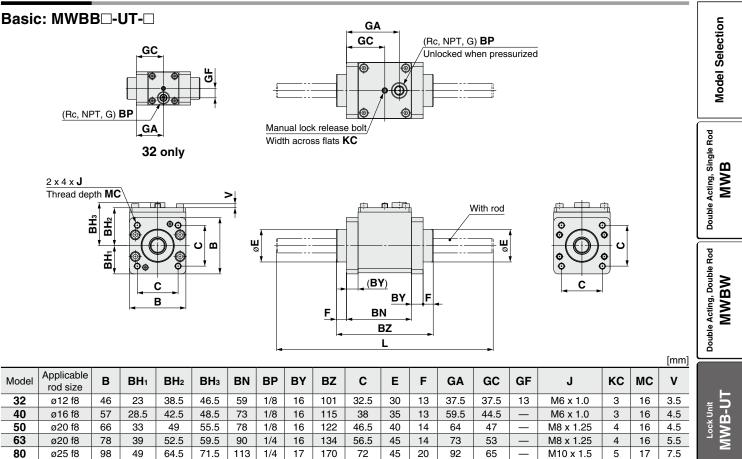

55

89

SMC

20

109

74

A Caution

ø30 f8

100

The piston rod end shape should be as shown below.

73.5

80.5


Chamfer the rod end to be inserted into the lock unit as shown in the figures below to prevent the seal and inner periphery of the lock unit from being scratched.

131

1/4


17

188




116


58



For male thread

Axial foot: MWBLD-UT-D

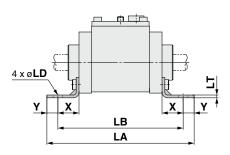



										[mm]
Model	LA	LB	LD	LH	LT	LX	LY	LZ	X	Y
32	137	119	7	30	3.2	32	68.5	50	22	9
40	159	137	9	33	3.2	38	75.5	55	24	11
50	170	148	9	40	3.2	46	89	70	27	11
63	188	160	12	48	3.6	56	100.5	80	27	14
80	218	190	12	55	4.5	72	119.5	100	30	14
100	244	212	14	65	4.5	89	138.5	120	32	16

With Rod

Model	L					
woder	Min. length	Max. length				
32	250					
40	250					
50	300	2500* ¹				
63	300	2500**				
80	300					
100	300					

5

17

9.5


Auto Switch


Made to Order

*1 The maximum rod length of the MWBD32-XC68 is 1800 mm.

M10 x 1.5

Flange: MWBF -- UT-

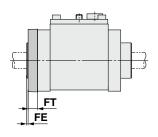

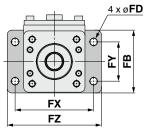

							[mm]
Model	FB	FD	FE	FT	FX	FY	FZ
32	56	7	3	10	72	38	87
40	65	9	3	10	83	46	101
50	77	9	2	12	100	52	120
63	92	9	2	12	115	62	135
80	100	12	4	16	126	63	153
100	120	14	4	16	150	75	178

MWB Series Made to Order Individual Specifications

Please contact SMC for detailed dimensions, specifications, and lead times.

1 Dimensionally Compatible with the MNB Series



MNB(W) series cylinders can easily be replaced with MWB(W) series cylinders.

How to Order

Standard model no. - X3000

Dimensionally compatible with the MNB series

Cylinder Specifications

Bore size	32	40	50	63	80	100
Action	Double acting, Single rod/Double rod					
Max. operating pressure	1.0 MPa					
Min. operating pressure	0.08 MPa					
Piston speed*1	50 to 1000 mm/s					
Rod boot	None					
Cushion*2	Air cushion					
Port size (Rc, NPT, G)	1/8	1,	/4	3/	/8	1/2
Mounting*3	Basic, Axial foot, Rod flange, Head flange, Single clevis, Double clevis					ange,


*1 Load limits exist depending upon the piston speed when locked, mounting direction, and operating pressure.

*2 Only an air cushion is available.

*3 Center trunnion type is not available.


Dimensions

Single rod

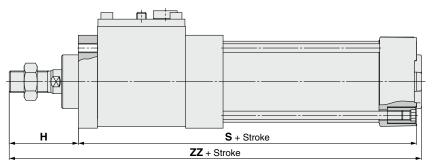


			[mm]
Bore size	Н	S	ZZ
32	47	154	205
40	51	161	216
50	58	183	245
63	58	197	259
80	72	245	321
100	72	265	341

Double rod

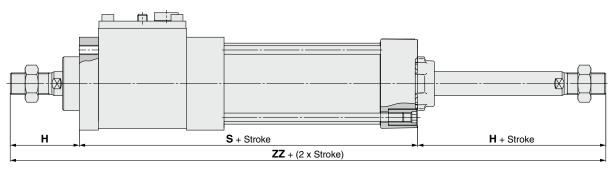

			[mm]
Bore size	Н	S	ZZ
32	47	154	248
40	51	161	263
50	58	183	299
63	58	197	313
80	72	245	389
100	72	265	409

Made to Order Individual Specifications **MWB** Series

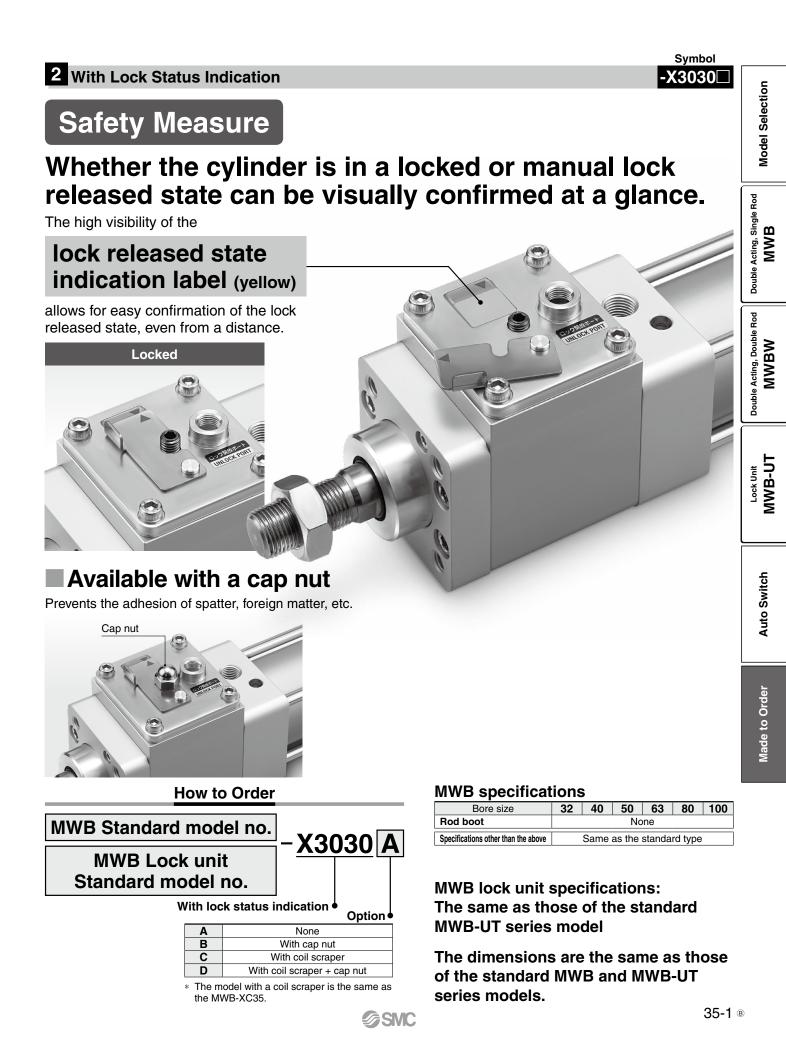

MWB Series

2 With Lock Status Indication


Symbol -X3030

Changing from the manual lock released state to the locked state

1 Turn the lock release bolt counterclockwise.


 Continue to turn the bolt counterclockwise until the groove in the middle of the lock release bolt is completely above the body surface.



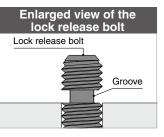


2 Align the groove and the locked state indication plate.

1. Insert the locked state indication plate into the groove in the bolt and align the orientation marks until the lock released state indication label (yellow) is no longer visible.

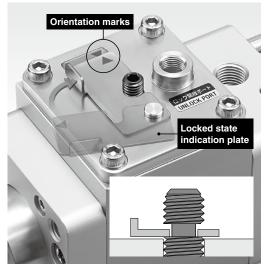





If the bolt is not sufficiently turned counterclockwise, the groove position will not be aligned and the locked state indication plate cannot be inserted.

3 Secure the locked state indication plate.

- 1. Continue to turn the lock release bolt counterclockwise.
- 2. The locked state indication plate will move upward, securing it.
- 3. Confirm that the locked state indication plate does not move.






When the locked state indication plate is secured, the end of the plate will be lifted slightly.

Caution
Before operating the cylinder, be sure to first carry out a test operation to check for operation abnormalities as stated
in the precautions in the MWB Series Operation Manual on the SMC website.

SMC

A 35-2

Made to Order Individual Specifications **MWB** Series

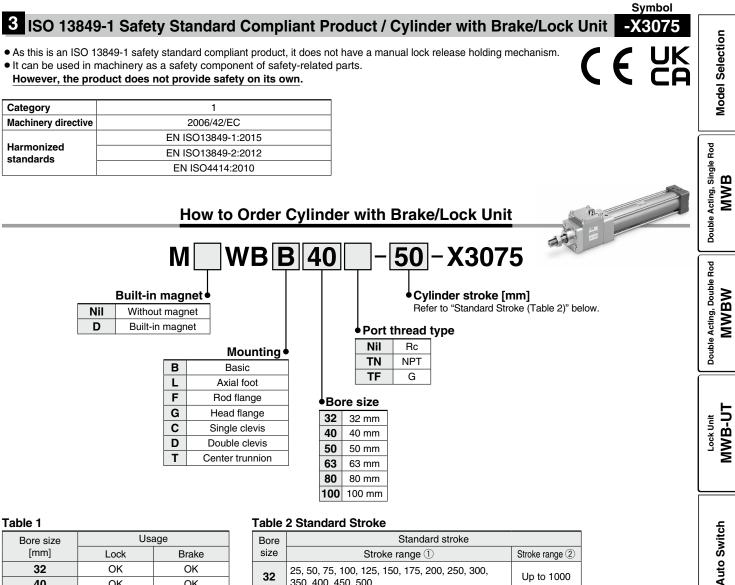

Usage			
Lock	Brake		
OK	OK		
OK	OK		
OK	OK		
OK	ОК		
OK	OK		
ОК	OK		
	Lock OK OK OK OK OK		

This product provides braking function and locking function.

These functions are defined as follows:

· Braking means to stop a moving object

(intermediate stop or emergency stop). Locking means to retain a stationary object in

place (drop prevention or holding position).

Bore	Standard stroke		
size	Stroke range ①	Stroke range ②	
32	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500	Up to 1000	
40	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500		
50	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600		
63	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600	Up to 1800	
80	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600, 700, 800		
100	25, 50, 75, 100, 125, 150, 175, 200, 250, 300, 350, 400, 450, 500, 600, 700, 800		

* The manufacturing of intermediate strokes is possible. (Spacers are not used.)

* Applicable strokes should be confirmed according to the usage. For details, refer to the Air Cylinders Model Selection in the **Web Catalog**. In addition, products that exceed the stroke range ① might not be able to fulfill the specifications due to deflection, etc.


Dimensions: Same as the standard MWB

Specifications

Bore size [mm]	32	40	50	63	80	100
Action	Double acting, Single rod					
Cushion	Air cushion					
Auto switch	None					
Rod boot	None					
Other specifications	Same as standard type					

* Pivot brackets, rod end brackets, etc., are not included.

Made to Order

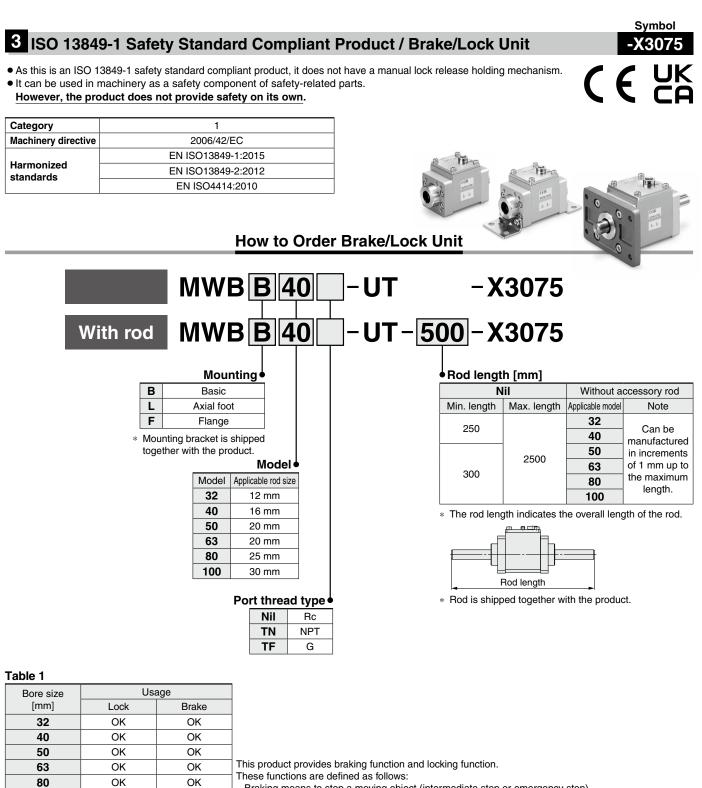

 \cdot Braking means to stop a moving object (intermediate stop or emergency stop).

*∕∂*SMC

· Locking means to retain a stationary object in place (drop prevention or holding position).

Specifications and dimensions: Same as the standard MWB-UT

⚠ Caution

100

As this product does not have a manual lock release holding mechanism, supply air pressure to the lock port to release the lock.


OK

OK


MWB Series Simple Specials

The following changes are dealt with through the Simple Specials System.

Please contact your local sales representative for more details.

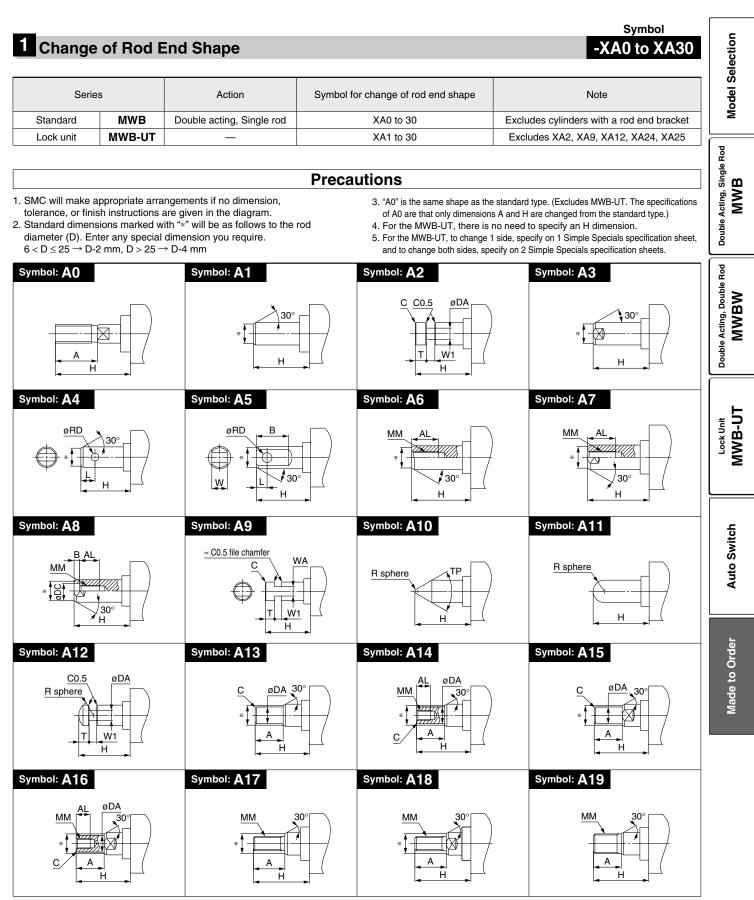


MWB Series

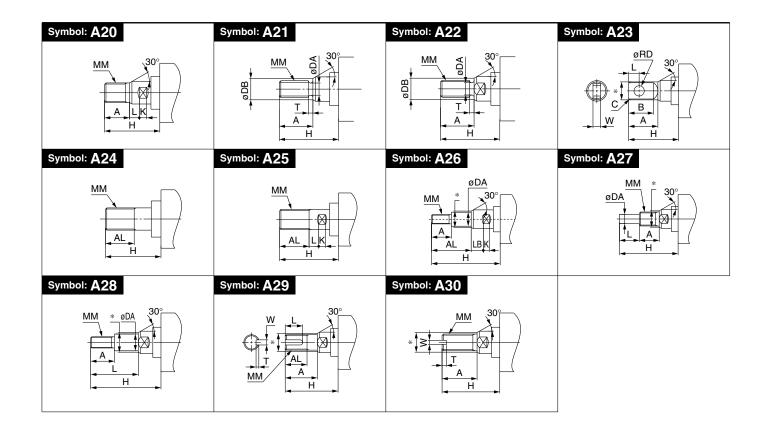

Made to **MWB** Series Order Made to Order Common Specifications

Please contact SMC for detailed dimensions, specifications, and lead times.

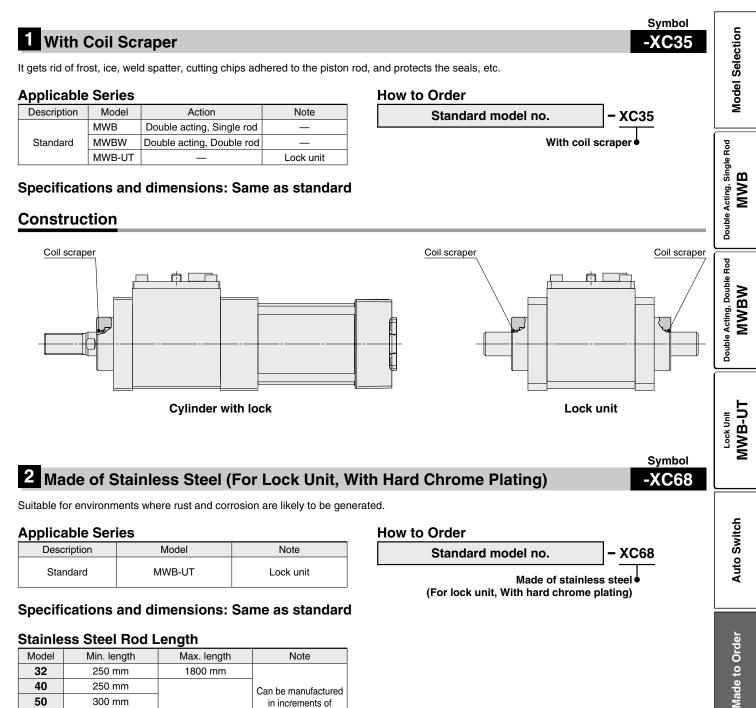

Model	Min. length	Max. length	Note		
32	250 mm	1800 mm			
40	250 mm		Can be manufactured		
50	300 mm		in increments of		
63	300 mm	2500 mm	1 mm up to the		
80	300 mm		maximum length.		
100	300 mm				



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For actuator and auto switch precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: http://www.smcworld.com

Design of Equipment and Machinery

Warning

1. Construct so that the human body will not come into direct contact with driven objects or the moving parts of the cylinders with lock.

Devise a safe structure by attaching protective covers that prevent direct contact with the human body, or in cases where there is a danger of contact, provide sensors or other devices to perform an emergency stop, etc., before contact occurs.

2. Use a balance circuit, taking cylinder lurching into consideration.

In cases such as an intermediate stop, where a lock is operated at a desired position within the stroke and air pressure is applied from only one side of the cylinder, the piston will lurch at high speed when the lock is released. In such situations, there is a danger of causing human injury by having hands or feet, etc. caught, and also a danger for causing damage to the equipment. In order to prevent this lurching, a balance circuit such as the recommended pneumatic circuits (page 41) should be used.

Selection

A Warning


1. When in the locked state, do not apply a load accompanied by an impact shock, strong vibration or turning force, etc.

Use caution, because an external action such as an impacting load, strong vibration or turning force, may damage the locking mechanism or reduce its life.

2. Consider stopping accuracy and the amount of overrun when an intermediate stop is performed.

Due to the nature of a mechanical lock, there is a momentary lag with respect to the stop signal, and a time delay occurs before stopping. The cylinder stroke resulting from this delay is the overrun amount. The difference between the maximum and minimum overrun amounts is the stopping accuracy.

- Place a limit switch before the desired stopping position, at a distance equal to the overrun amount.
- The limit switch must have a detection length (dog length) of the overrun amount + α .
- SMC's auto switches have operating ranges from 8 to 14 mm (depending on the auto switch model). When the overrun amount exceeds this range, self-holding of the contact should be performed at the auto switch load side.
- For the stopping accuracy, refer to page 8.

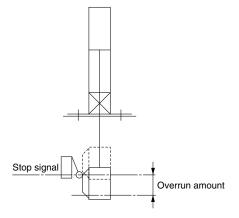

Selection

Warning

3. In order to further improve stopping accuracy, the time from the stop signal to the operation of the lock should be shortened as much as possible.

To accomplish this, use a device such as a highly responsive electric control circuit or solenoid valve, and place the solenoid valve as close as possible to the cylinder.

4. Note that the stopping accuracy will be influenced by changes in piston speed.

When piston speed changes during the course of the cylinder stroke due to variations in the load or disturbances, etc., the dispersion of stopping positions will increase. Therefore, consideration should be given to establishing a standard speed for the piston just before it reaches the stopping position.

Moreover, the dispersion of stopping positions will increase during the cushioned portion of the stroke and during the accelerating portion of the stroke after the start of operation, due to the large changes in piston speed.

5. The holding force (max. static load) indicates the maximum capability to hold a static load without loads, vibration and impact. This does not indicate a load that can be held in ordinary conditions.

Select the most suitable bore sizes for the operating conditions in accordance with the selection procedures. The Model Selection (pages 5 and 6) is based on use at the intermediate stop (including emergency stops during operation). However, when the cylinder is in a locked state, kinetic energy does not act upon it. Under these conditions, use the load mass at the maximum speed (V) of 100 mm/s shown in graphs [5] to [7] on page 6 depending on the operating pressure and select models.

Mounting


A Warning


- 1. The manual lock is released as default. The lock will not operate in this condition. Before starting operation, engage the lock.
- 2. Be certain to connect the rod end to the load with the lock released.

If connected in the locked state, a load greater than the turning force or holding force, etc. may operate on the piston rod and cause damage to the lock mechanism. As the MWB series is equipped with a manual lock release mechanism, it is possible to hold the lock released state without an air supply.

3. Do not apply offset loads to the piston rod.

Particular care should be taken to match the load's center of gravity with the center of the cylinder shaft. When there is a large discrepancy, the piston rod may be subjected to uneven wear or damage due to the inertial moment during locking stops.





X Load center of gravity and cylinder shaft center are not matched.

 Load center of gravity and cylinder shaft center are matched.

* Can be used if all of the generated moment is absorbed by an effective guide.



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For actuator and auto switch precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: http://www.smcworld.com

Mounting

A Caution

1. Use the hexagon wrenches shown below when replacing brackets.

	re size mm]	Bolt	Hexagon wrench size	Tightening torque [N·m]
3	32, 40 MB-32-48-C1247		4	5.1
50, 63 MB-50-48-C1249		5	11	
80,	Foot bracket	MB-80-48AC1251	6 25	
100	Other	MB-80-48BC1251	0 20	


2. When replacing the head side bracket, the tie-rod nut on the cylinder body also loosens.

After retightening the tie-rod nut at the proper tightening torque (refer to the Mounting 1. above.), install the bracket.

3. Do not turn the piston rod with the rod boot kept locked.

When turning the piston rod, loosen the band once and do not twist the rod boot.

Set the breathing hole in the rod boot downward or in the direction that prevents entry of dust or water content.

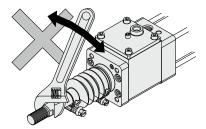

4. Do not disassemble the trunnion type cylinder because the mounting precision is required. It is difficult to align the axial center of the trunnion with the axial center of the cylinder. Thus, if this type of cylinder is disassembled and reassembled, the required dimensional accuracy cannot be attained, which may lead to malfunctions.

Adjustment

Marning

1. Do not open the cushion valve beyond the stopper. As a retaining mechanism for the cushion valve, a crimped section (ø32) or retaining ring (ø40 to ø100) is installed, and the cushion valve should not be opened beyond that point. If not operated in accordance with the above precautions, the cushion valve may be ejected from the cover when air pressure is supplied.

Bore size [mm]	Hexagon wrench size of cushion valve		
32, 40	2.5		
50, 63	3		
80, 100	4		

2. Use the air cushion at the end of cylinder stroke. If air cushion is not intended to be used at the stoke end, select the cylinder with rubber bumper.

If this is not done, the tie-rod or piston assembly will be damaged.

Adjustment

ACaution

1. Adjust the cylinder's air balance.

Balance the load by adjusting the air pressure in the rod and head sides of the cylinder with the load connected to the cylinder and the lock released. Lurching of the cylinder when unlocked can be prevented by carefully adjusting this air balance.

2. Adjust the mounting positions of the detectors on auto switches, etc.

When intermediate stops are to be performed, adjust the mounting positions of detectors on auto switches, etc., taking into consideration the overrun amount with respect to the desired stopping positions.

Pneumatic Circuit

\land Warning

- 1. Be certain to use an pneumatic circuit which will apply balancing pressure to both sides of the piston when in a locked stop. In order to prevent cylinder lurching after a lock stop, when restarting or when manually unlocking, a circuit should be used to which will apply balancing pressure to both sides of the piston, thereby canceling the force generated by the load in the direction of piston movement.
- 2. The effective area of the unlocking solenoid valve should be at least 50% of the effective area of the cylinder driving solenoid valve, and it should be installed as close to the cylinder as possible so that it is closer than the cylinder driving solenoid valve.


If the effective area of the unlocking solenoid valve is small or if it is installed at a distance from the cylinder, the time required for exhausting air for unlocking will be longer, which may cause a delay in the locking operation.

The delay in the locking operation may result in problems such as increase of overrunning when performing intermediate stop or emergency stop during operation, or if maintaining position from the operation stop state such as drop prevention, workpieces may be dropped depending on the timing of the load action to the operation delay of the lock.


- 3. Avoid backflow of the exhaust pressure when there is a possibility of interference of exhaust air, for example for a common exhaust type valve manifold. The lock may not operate properly when the exhaust air pressure backflows due to interference of the exhaust air when exhausting air for lock release. It is recommended to use an individual exhaust type manifold or individual valves.
- **4.** Allow at least 0.5 seconds from a locked stop (intermediate stop of the cylinder) until release of the lock. When the locked stop time is too short, the piston rod (and load) may lurch at a speed greater than the control speed of the speed controller.
- 5. When restarting, control the switching signal for the unlocking solenoid valve so that it acts before or at the same time as the cylinder drive solenoid valve. If the signal is delayed, the piston rod (and load) may lurch at a speed greater than the control speed of the speed controller.
- 6. Carefully check for dew condensation due to repeated air supply and exhaust of the locking solenoid valve. The operating stroke of the lock part is very small. So, if the piping is long and the air supply and exhaust are repeated, the dew condensation caused by the adiabatic expansion accumulates in the lock part. This may corrode internal parts, causing air leak or lock release fault.



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For actuator and auto switch precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: http://www.smcworld.com

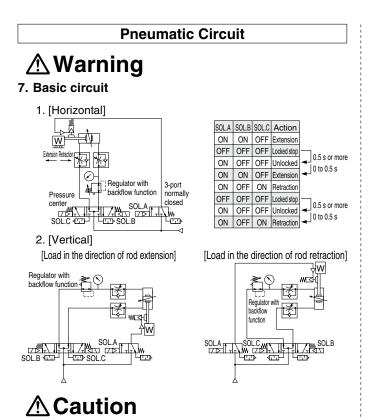

1. 3-position pressure center solenoid valve and regulator with backflow function can be replaced with two 3-port normally open valves and a regulator with relief function.

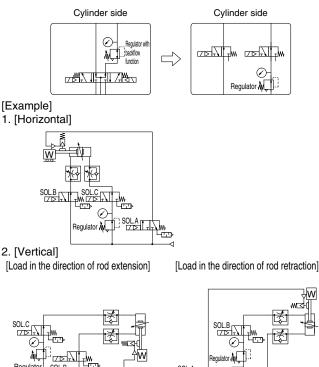

<u>ب</u>سک

Manual Lock Release

\land Warning

- 1. Never operate the lock release bolt until safety has been confirmed.
 - When unlocking is performed with air pressure applied to only one side of the cylinder, the moving parts of the cylinder will lurch at high speed causing a serious hazard.
 - When unlocking is performed, be sure to confirm that personnel are not within the load movement range and that no other problems will occur if the load moves.
- 2. Before operating the lock release bolt, exhaust any residual pressure which is in the system.
- 3. Take measures to prevent the load from dropping.
 - Perform work with the load in its lowest position.
 - Take measures for drop prevention by strut, etc.


\land Caution

1. When releasing the locked state with the lock release bolt for the purpose of mounting or adjustment, be sure to return the lock release bolt to the locked state.

If the lock release bolt is not returned to the locked state, the lock might not function correctly or lock release might not be completed due to air leakage from the lock release bolt.

[How to return to locked state]

- 1) Rotate the lock release bolt counterclockwise by hand with a hexagon wrench until it stops. Once that position is reached, rotate it an additional 1/6th of a turn to securely tighten the lock release bolt.
 - * Do not use an electric screwdriver or pneumatic screwdriver.

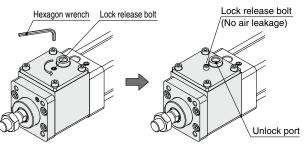



Manual lock released

Locked

Bore size [mm]	Hexagon wrench size of the lock release bolt
32, 40	3
50, 63	4
80, 100	5

2) Pressurize the unlock port with 0.3 MPa or more and check that there is no air leakage from the lock release bolt and lock correctly functions.









Be sure to read this before handling the products. Refer to the back cover for safety instructions. For actuator and auto switch precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: http://www.smcworld.com

Maintenance

▲ Caution

1. Lock units are replaceable.


When ordering the lock unit for maintenance, select the suitable lock based on the cylinder bore size.

Bore size [mm]	Port type	Replacement lock unit part no.
	Rc	MWB32-UA
32	NPT	MWB32TN-UA
	G	MWB32TF-UA
	Rc	MWB40-UA
40	NPT	MWB40TN-UA
	G	MWB40TF-UA
	Rc	MWB50-UA
50	NPT	MWB50TN-UA
	G	MWB50TF-UA
	Rc	MWB63-UA
63	NPT	MWB63TN-UA
	G	MWB63TF-UA
	Rc	MWB80-UA
80	NPT	MWB80TN-UA
	G	MWB80TF-UA
	Rc	MWB100-UA
100	NPT	MWB100TN-UA
	G	MWB100TF-UA

For lock unit with a rod boot, add -J to the part number suffix. Example) MWB50-UA-J

2. How to replace lock units


1) To release the locked state, screw-in the lock release bolt to the body cap end or pressurize the unlock port with 0.3 MPa or more.

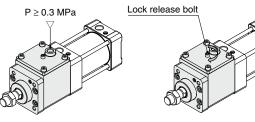


a) Lock released by air pressure


- b) Manual lock release

2) Remove the lock unit holding bolt (hexagon socket head cap screw) with a hexagon wrench. For the applicable hexagon wrench, refer to the table below. If using the rod end nut, remove it.

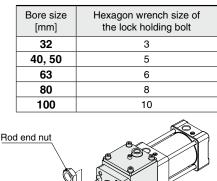



3) Pull out the old lock unit from the cylinder.

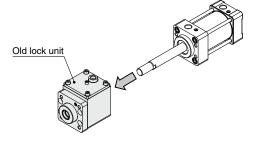


4) Insert a new lock unit into the cylinder. The lock unit for maintenance is supplied with lock released

state at the shipment from the factory.

Note)

Do not lock and operate the lock unit the lock unit has been mounted to the cylinder.

If the lock unit is operated before the rod has been inserted, the lock may not release properly and it will be difficult to insert the rod.

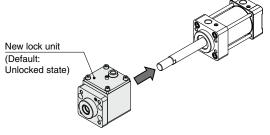




Be sure to read this before handling the products. Refer to the back cover for safety instructions. For actuator and auto switch precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: http://www.smcworld.com

Maintenance

ACaution


5) Insert the lock unit holding bolt and tighten it temporarily. Check that the piston rod operates smoothly by hand while maintaining the lock released state.

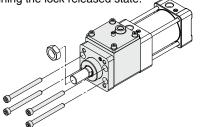

6) Confirm that the operation of 5) above is performed correctly, and then tighten the lock unit holding bolt with an appropriate tightening torque as shown in the table below.

Bore size [mm]	Appropriate tightening torque of the lock unit holding bolt [N·m]
32	1.35 to 1.65
40, 50	4.7 to 5.7
63	11.3 to 13.7
80	22.1 to 26.9
100	37.8 to 46.2

- 7) After assembly is completed, rotate the lock release bolt counterclockwise by hand with a hexagon wrench until it stops. Once that position is reached, rotate it for an additional 1/6th of a turn to securely tighten the lock release bolt.
 - * Do not use an electric screwdriver or pneumatic screwdriver.

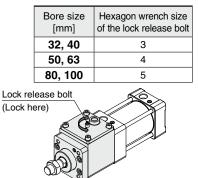

Check that the cylinder is locked and confirm that the lock is released when air pressure of 0.3 MPa or more is applied to the unlock port on the lock unit. In addition to this, the piston rod should operate smoothly with the minimum operating pressure. Check that there is no air leakage from the lock release bolt.



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For actuator and auto switch precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: http://www.smcworld.com

<Precautions for the lock unit MWB -UT>

Design / Selection

- When selecting a lock unit, refer to Model Selection on pages 5 and 6.
- Use a rod of the size recommended in the following table.


Unit model	MWB32-UT	MWB40-UT	MWB50-UT	MWB63-UT	MWB80-UT	MWB100-UT
Applicable rod size	ø12 f8	ø16 f8	ø20 f8	ø20 f8	ø25 f8	ø30 f8
Material	Carbon steel/Stainless steel					
Surface treatment	Hard chrome plating: 10 μm					
Surface roughness	Maximum height: Rz 1.6 or less					

Using any rod other than the rods recommended above may cause damage to internal parts of the lock unit, faulty mounting of the lock unit, operation failure, decrease in holding force, etc.

- The lock unit may be damaged if an excessive lateral load or external force is applied to it. Fully consider this point.
- Do not use the lock unit for any application where the rod rotates.
- When in the locked state, do not apply a load accompanied by an impact shock, strong vibration, turning force, etc.

Note that an external action, such as an impacting load, strong vibration, or turning force, may damage the lock unit or reduce its life.

- Excessively long piping between the unlock port of the lock unit and the solenoid valve for the lock, or a pipe that is too small may affect the stopping accuracy of the lock unit.
- When unlocking is performed from the locked state with some thrust or load still applied to the lock unit, cylinder lurching may occur. In addition, frequent occurrence of excessive cylinder lurching or a similar problem due to the load being applied will damage the lock unit or reduce its life. Take appropriate measures for the circuit and/or the system. When using the lock unit in combination with a pneumatic cylinder, cylinder lurching can be prevented by using a balance circuit, such as the recommended pneumatic circuits on page 41.
- When using the lock unit by placing it in parallel with the cylinder for driving as shown in the figure below, align the cylinder with the rod.

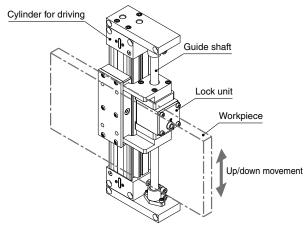

Mounting / Adjustment

• The lock unit is shipped from the factory with the lock released.


Do not lock and operate the lock unit the rod has been inserted into the lock unit.

If the lock unit is operated before the rod has been inserted, the lock may not release properly and it will be difficult to insert the rod.


• Ensure that the sliding surface of the rod to be inserted into the lock unit is not scratched or dented during the mounting or adjustment of this product.

Scratches or dents on the surface of the rod may cause unusual wear on the inner surface of the brake pad or decrease its holding force.

 Chamfer the rod end to be inserted into the lock unit as shown in the figures below to prevent the seal and inner periphery of the lock unit from being scratched.



For male thread



For female thread

• Refer to page 41 for the manual lock release.

Maintenance / Inspection

• Do not disassemble the lock unit and perform maintenance.

Please contact our nearest sales office when you require repair or maintenance.

• Do not apply any grease or lubricant to the inner periphery of the lock unit or the surface of the rod to be inserted into the lock unit.

Doing so may result in a decrease in holding force.

• Take additional safety measures when conducting equipment maintenance.

▲ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "**Caution**," "**Warning**" or "**Danger**." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)^{*1}, and other safety regulations.

- Caution: indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
- Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

AWarning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
 - The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

- 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
- An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

- *1) ISO 4414: Pneumatic fluid power General rules relating to systems.
 - ISO 4413: Hydraulic fluid power General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)
 - ISO 10218-1: Manipulating industrial robots Safety. etc.

 The product is provided for use in manufacturing industries. The product herein described is basically provided for peaceful use in manufacturing industries. If considering using the product in other industries, consult SMC beforehand

and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.

2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Revision History					
Edition B * A lock unit has been added. * Made to order options (With coil scraper: -XC35, Stainless steel rod: -XC68) have been added. * Number of pages has been increased from 36 to 44. Edition C * Bore sizes ø80 and ø100 have been added.	VT	 Edition D * The minimum operating pressure of the lock unit has been changed from 0.08 MPa to 0.3 MPa. * The shaft diameter CD of the single rod single clevis type pin mounting hole has been deleted. * (Specific Product Precautions - Maintenance 6)) The applicable tightening torque for the lock unit holding bolt has been revised (ø40, ø50, ø63). WP 			
* Number of pages has been increased from 44 to 48.	VX	torque for the lock unit holding bolt has been revised (ø40,			

A Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.